


The Power of Thermodynamics™

Original Operating Manual

PRESTO™

User Interface

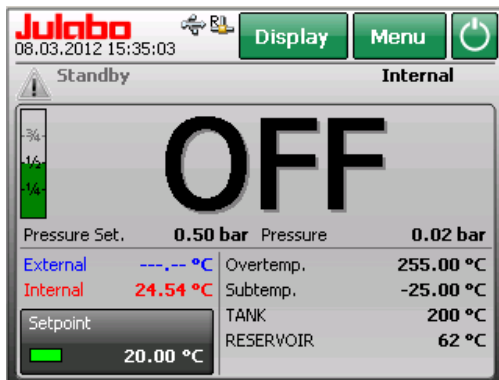

1.951.3041-V10 02/18

JULABO GmbH

77960 Seelbach / Germany ▪ Phone +49 (0) 7823 / 51-0 ▪ Fax +49 (0) 7823 / 24 91 ▪ info.de@julabo.com ▪ www.julabo.com

Important: keep original operating manual for future use

Table of Contents



Table of Contents	3
1. Initial Operation.....	6
1.1. Connecting to power supply	6
1.2. Switching the unit on / selecting language	6
2. Normal display	7
2.1. Set temperature.....	11
2.2. Start / Stop 	11
3. Main menu view.....	12
3.1. Available keys in the main menu.....	12
3.2.  Unit Access/Safety Settings	13
3.2.1. Administrator - Managing Access to the Unit.....	13
3.2.2. User Groups - Managing Access to the Unit	16
4. "Settings" menu	18
4.1. "Language" menu.....	18
4.2. "Autostart" menu	19
4.3. "Units" menu.....	19
4.4. Menu Customize Home display	20
4.5. "Date / time" menu	21
4.6. "Colors" menu	21
4.7. "Keypad tones" menu.....	22
4.8. "Info" menu	22
4.9. Max. current consumption menu.....	22
5. "Determine thermodynamics" menu	23
5.1. "Adjust controller" menu	23
5.1.1. "Self-tune" menu	24
5.1.2. Bandlimit Selftune	24
5.1.3. "Adjust control performance" menu	25
5.1.4. "Adjust limits" menu	28
5.2. "Adjust pump" menu.....	30
5.2.1. „Type“ menu.....	30
5.2.1.1. Type „Stage control“	30
5.2.1.2. Type „Pressure control“	31
5.2.1.3. Type „Flow rate Control“	32
5.2.2. "Pump mode" menu	32
6. "Using a programmer" menu	34
6.1. "Edit a profile" menu.....	35
6.1.1. Add.....	36
6.1.2. Edit.....	37

Table of Contents

6.1.3.	Delete	37
6.1.4.	Insert	37
6.2.	"Starting a profile" menu.....	38
6.3.	"Using a programmer series" menu	40
7.	"Recording data" menu.....	42
7.1.	JULABO Service – Online remote diagnosis	44
8.	"Service" menu	45
9.	"Safety adjustments" menu	46
9.1.	"Temperature limits" menu	46
9.1.1.	Minimum and maximum setpoint	46
9.1.2.	Subtemperature, Overtemperature.....	46
9.1.3.	Allowed temperature gradient per minute	47
9.2.	"Pressure limits" menu	48
9.2.1.	Permissible Pumpstage	48
9.2.2.	Permissible pressure Setpoint	48
9.2.3.	Upper and lower pressure warning limit	49
9.2.4.	Upper and lower pressure warning limit	50
9.3.	Flow limits	50
9.3.1.	Min. and max. flow setpoint	50
9.3.2.	Upper and lower flow warning limit	51
10.	"Connect unit" menu	52
10.1.	"Remote control" menu	52
10.2.	„External setpoint“ menu	53
10.3.	"Actuating variable" menu	54
10.4.	"Digital interfaces" menu	55
10.4.1.	RS232	55
10.4.2.	Watchdog.....	55
10.4.3.	Ethernet.....	59
	Ethernet menu	59
	Network-based connection	62
	Creating a Direct Connection between PRESTO™ and PC	63
10.5.	"Analog interfaces" menu.....	65
10.5.1.	Alarm output.....	65
10.5.2.	JULABO Sensor Pressure / Flow.....	66
10.5.3.	EXT Pt100 2 (accessory)	69
10.5.4.	Analog module (optional)	70
	Standby connector	71
	REG+E-PROG connector	72
11.	"Install unit" menu	79
11.1.	"Fill unit" menu (refilling).....	79

11.2.	"Empty the unit" menu	81
11.3.	"Adjust sensors" menu	83
11.4.	"Reset unit" menu.....	86
11.5.	"Unit name" menu	87
11.6.	Save/load parameters	87
11.7.	Configure unit.....	89
11.8.	Firmware update	91
12.	Error messages, fault causes, remedies	92
13.	Remote control	94
13.1.	Setup for remote control.....	94
13.2.	Communication with a PC or a superordinated data system.....	95
13.3.	List of commands	96
13.3.1.	in commands.....	96
13.3.2.	out commands	99
13.4.	Status messages.....	101
13.4.1.	Status messages as reply to sent commands	101
14.	Communication via Modbus TCP/IP.....	102
14.1.	Datatypes	102
14.1.1.	Used Datatypes	102
14.1.2.	Data Encoding	102
14.2.	Error Handling	102
14.3.	Holding-Registers.....	103
14.3.1.	Function-Codes.....	103
14.3.2.	Register table	103
14.4.	Input-Registers	106
14.4.1.	Function-Codes.....	106
14.4.2.	Register-Table	106
15.	Error messages	108
15.1.	Alarm messages.....	109
	Error in module configurations	110
15.2.	Warning messages.....	115
16.	Appendix: Peer-to-peer remote display operation of PRESTO[®]	118
	with CerHost via Ethernet.....	118
16.1.	Connect the PRESTO™ to the LAN port of your PC or tablet.....	118
16.2.	Adjust the Network settings on your PC	118
16.3.	Adjust settings on the PRESTO™	120
16.4.	Connect to the PRESTO™ with CerHost.....	120

1. Initial Operation

1.1. Connecting to power supply



Caution:

- This device may be attached to protected earth (PE) mains power outlets only!
- The mains plug serves as a reliable way to disconnect the unit from its power supply for safety reasons and must be readily accessible at all times.
- Do not attempt to use the unit if the power cable is damaged!
- Regularly inspect the power cable for damage.
- No liability for improper power connection!

Compare the available mains voltage and mains frequency with the specifications on the type label.

- Connect the mains plug to a protected earth (PE) power supply socket!

1.2. Switching the unit on / selecting language



- i** Refer to >Settings menu< on page 18 for language selection.


To switch the unit on:

Use the mains switch to bring the unit into operation.

The integrated lamp indicates that the power is on.

As initialization proceeds, the unit will assume the start positions and emit mechanical sounds.

The unit's name and voltage type are displayed briefly.

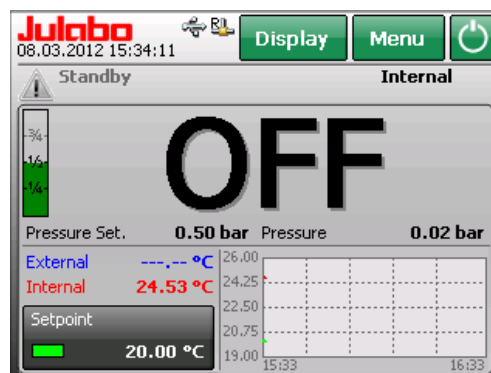


The unit will enter the same operating mode that it was in before shutdown, i.e.

manual model (operation with the unit's controls or remote control (operation via PC).




2. Normal display

Normal display: 
 The normal display contains important values and functions.

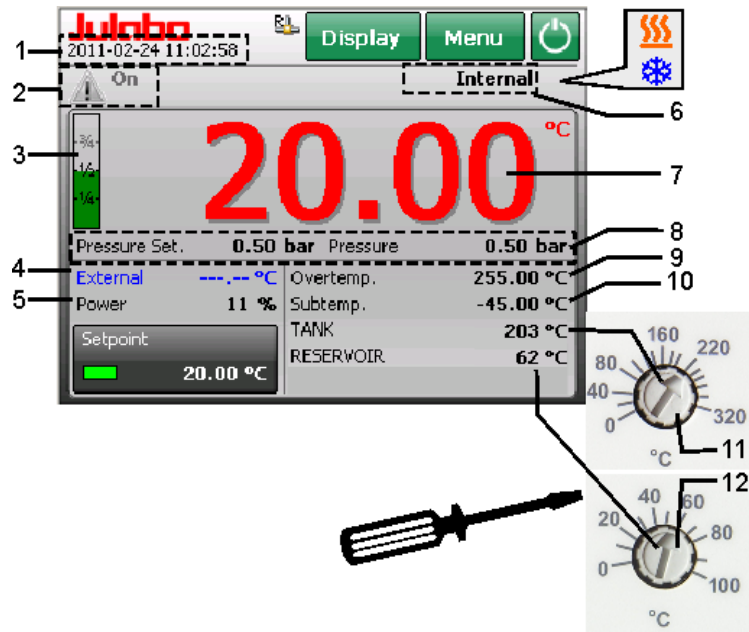

i Adjust the high temperature cut-off by slowly turning the dial with a screwdriver. The exact value will appear on the display.



Note:
 The order and availability of values 9 to 12 will depend on the settings in the > Customize Home display < menu. Page 20
 The factory state is shown here.










- 1 Date / time
- 2 Status:  on/Standby / Warning 
- 3 Fill level indicator
- 4 External temperature sensor value
- 5 Current power (X% heating, -X% cooling)
- 6 Selected temperature control (internal/external)
- 7 Actual liquid temperature
- 8 Selected max. pressure and actual pressure
- 9 Selected high temperature cut-off ( page 46)
- 10 Selected low temperature cut-off
- 11 High temperature cut-off (**TANK**)
- 12 High temperature cut-off (**RESERVOIR**)



-  Cooling icon Blinking or continuous
-  Heating icon Blinking or continuous
- < Setpoint button

State information
 Examples:



-  Remote control mode through interface ( page 94)
-  A storage medium is inside the unit. ( page 42)
-  The unit is connected to a PC via ethernet. ( page 55)
-  Access to unit is blocked ( page 13)
-  Remote control mode via "Wireless Temp"




Warning

- The **> TANK <** high temperature cut-off should be set to 15 °C above the working temperature setpoint.
- The **> RESERVOIR <** high temperature cut-off **must** be set to at least 25 °C below the heattransfer liquid's flashpoint.

Adjust the normal display



① You can adjust the normal display to your requirements by pressing the **>Display<** key.

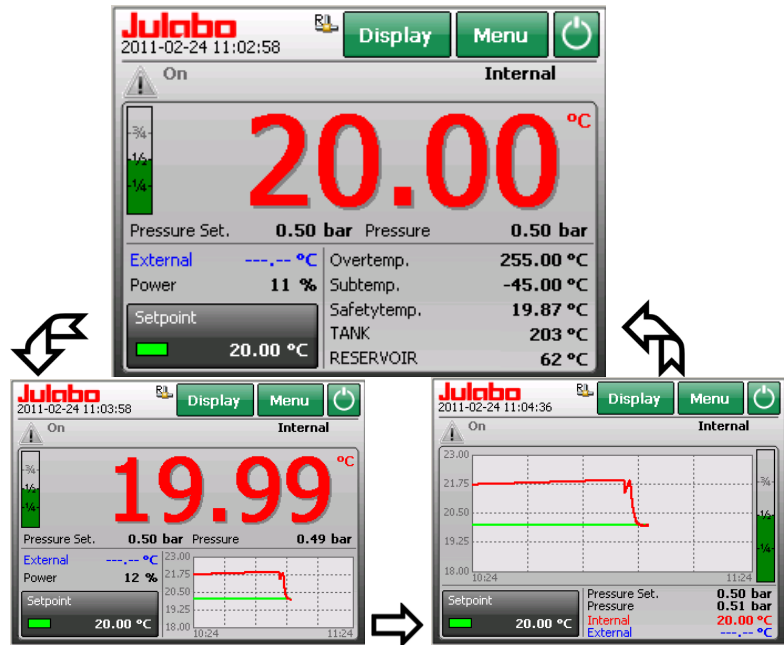

① You may select the colors used in the normal display's chart.
>Settings menu< page 18.

Chart shows the progression of the setpoint and actual temperature.

Displays during errors


- ALARM** red > **14**
- WARNING** yellow > **40**

The unit provides straightforward and intuitive operation on the color TFT display even during errors.

Error messages are divided into two categories:
>ALARM< and **>WARNING<**

Help is always accessible through

the icons  or .

Touch the icon and a list of errors will be displayed. 

Code	From	Until	?	X
14	2011-02-24 11:05:39		?	X
40	2011-02-24 09:33:55	2011-02-24 09:46:31	?	X
108	2011-02-23 15:33:39	-	?	X
14	2011-02-23 14:31:44	2011-02-23 15:33:39	?	X
1	2011-02-23 13:02:31	-	?	X

Date and time when the error appeared are stored and displayed. If possible, this data will also be stored during removal of the error.

Example code **40** **14**

ALARM display

Error messages are displayed in a red box.

Resolution for example E14:

Touch the red box to



mute the alarm.

Press < ? > button for help text.

The module and the configuration are displayed. →

Follow the instructions in the help text. →→

Press < OK > button. →

Press < ? > button again for help text. →

Press < Reset > button. →→


Another error message (E108) appears and describes a pathway for overcoming the alarm.

Press < ? > button for help text. →


Follow the instructions in the help text. →→

The unit is now ready to continue operation.

The unit switches to „Standby“. Heater, refrigeration unit and circulation pump are switched off.

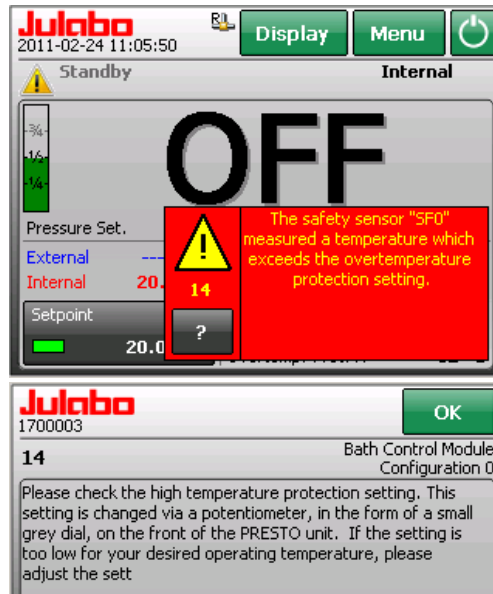


ⓘ Error message (E 14) remains although the safety temperature has been raised.

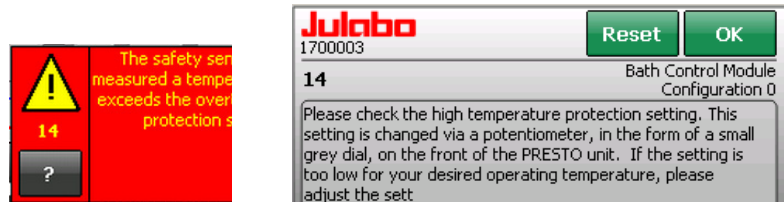

ⓘ A <Reset> is not permitted in this case because, according to NAMUR, this condition must be resolved via hardware.

Errors not subject to this regulation are resolved via <Reset>.

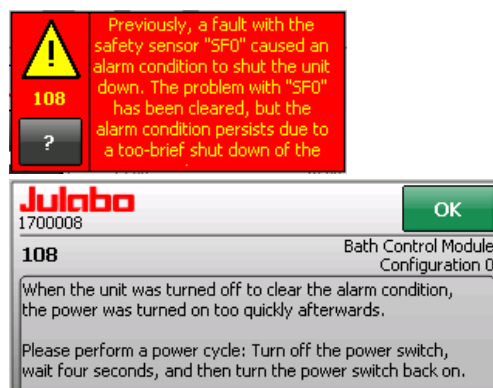


Not all alarms may be removed on-site.
List of all error messages see page 108

WARNING display:

A warning does not result in shutdown of the heater, refrigeration unit, and circulation pump.

The unit provides the option of defining some warning limits independently, such as limits for pump pressure, limits for over-temperature and under-temperature.

If one of these limits is exceeded, a warning (ticker and signal) will continue for as long as the cause is active.

The yellow attention symbol  will remain. It will draw attention to events that occurred during absence of the operating personnel. The events are stored in a list of errors.


Warnings are displayed as a ticker in the status line.






Example: Warning 40



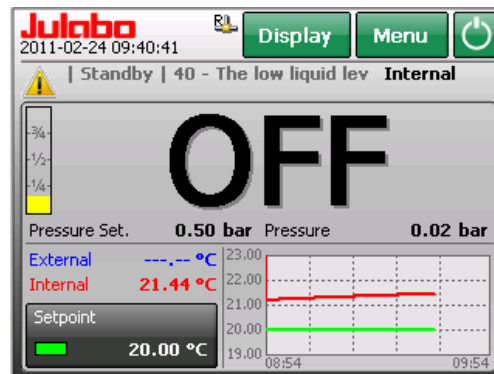




Touch the icon to mute the signal.





Touch  or  and a list of errors will be displayed.

Use the   keys to view the list.

Use the  key to exit the list. The yellow Attention icon "" is reset to "".

Buttons in the list -  

Press the  button for help text.

Press  to delete an error message from the list.


The 10 most recent events are shown.

The complete list may be viewed in the password-protected service menu.




page 45

Code	From	Until	?	X
40	2011-02-24 09:33:55		?	X
108	2011-02-23 15:33:39		?	X
14	2011-02-23 14:31:44	2011-02-23 15:33:39	?	X
1	2011-02-23 13:02:31		?	X
1	2011-02-23 11:10:01		?	X

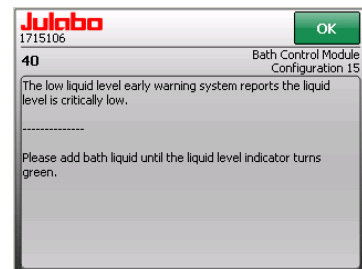

Code	Von	Bis	?	X
40	2011-02-24 09:33:55	2011-02-24 09:46:31	?	X
108	2011-02-23 15:33:39		?	X
14	2011-02-23 14:31:44	2011-02-23 15:33:39	?	X

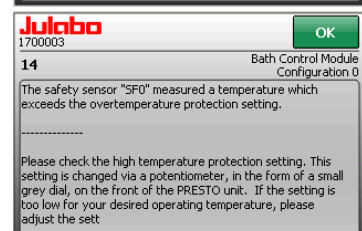


2.1. Set temperature

Select setpoint



Setpoint button

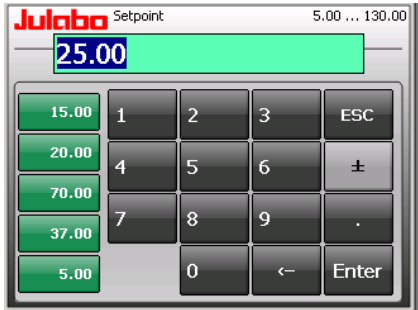

↩ Input panel (example: 25.00 °C)

↩↩ The green keys display the most recently selected values.

↩ Input keys
Keys 0 to 9 (digits keypad)



Decimal point button

Minus/plus button

Backspace key

Exit window without changes

Input/confirm entry

2.2. Start / Stop




Press Start/Stop button




The start-up phase can last up to 30 seconds.

The unit switches to „On“ and runs through a start-up phase, during which various parameters are checked and/or adjusted. When the ticker is no longer displayed, the unit operates normally.

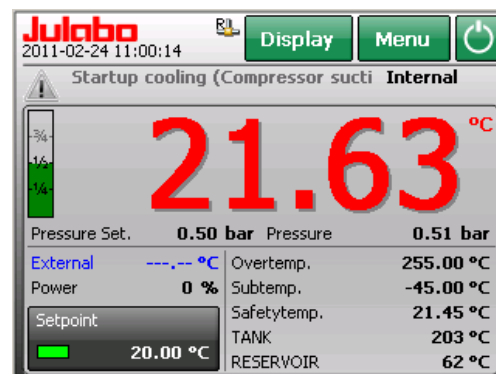

3. Main menu view



3.1. Available keys in the main menu



Block access to unit  / password-protected actions.




Go back one menu level.



Home (return to normal display).



Retrieve help menu

Press  and then press the desired entry in the menu.



Indicates available submenu.

Digits keypad



Keys 0 to 9 (digits keypad)



Exit window without changes



Move cursor: left / right

Example: Date input boxes



Backspace key



Input/confirm entry

Example: Input box with temperature value -10 °C



Decimal point button




Minus/plus button

3.2. Unit Access/Safety Settings



have full rights.




Administrator assignment of password and access rights.

Without an entry in the menu, the unit can be operated by any authorized person. You can change the unit's safety settings in this menu. The authorized users and user rights can be restricted.



An >Administrator< is authorized to manage access to the unit. He can approve differing rights for two groups of users. Access is always password-protected.

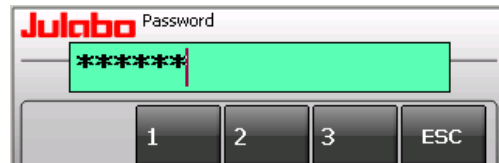
A six-digit password was set at the factory so the administrator can gain initial access.
Six zeros: **000000**



 Refer to page 16 to change the administrator password.

3.2.1. Administrator - Managing Access to the Unit

Press the key  
in > **Main menu** <.

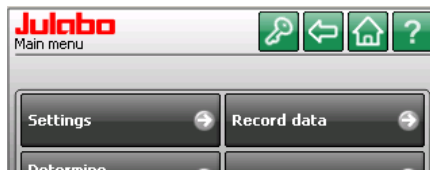


The >Unit account< menu is displayed.

 Light gray buttons are blocked.


Press the key



Enter the administrator password.

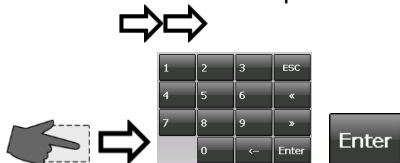

>Lock unit< >Idle timer<
Description page 17






Press >Logout< to re-enable access to the unit.

The administrator uses the password-protected **>Settings<** menu to grant access rights and passwords.



Default settings

If none of the user groups are logged in, the released functions and menus will be accessible by all users.

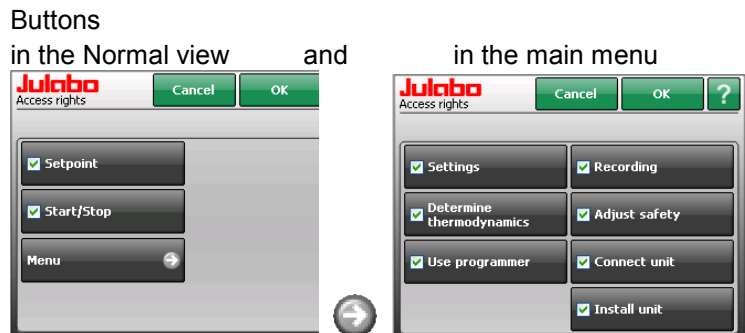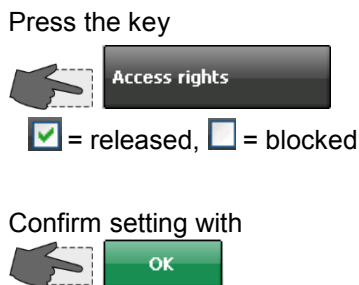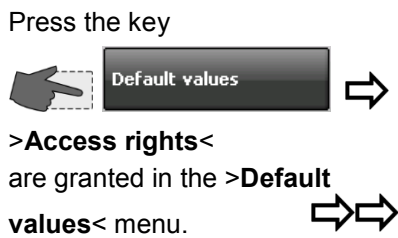

User groups

This is where the administrator assigns a password and access rights to specific user groups.


If a user group is logged in, settings can be changed only after entering the corresponding password.



Press the key



The user is asked to enter a new password and reenter the password for confirmation.





Confirm setting with



Example:

Basic users

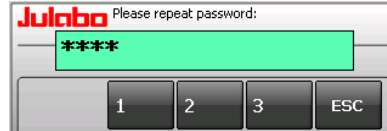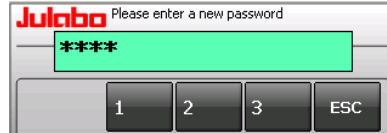

Example:

4-digit password for > Basic users <

Press the key



Use the check box to grant or deny access rights to user groups.


Confirm setting with



Basic users


Advanced users

Factory settings

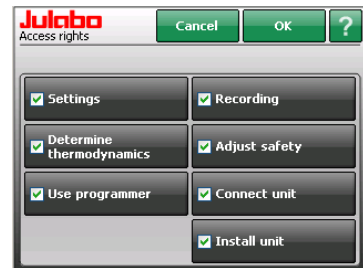


Reset

Press the key



Press this button to reset all access rights to factory settings.

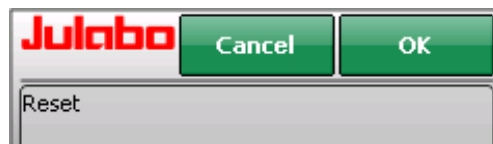


Administrator

Change Password:

Press the key





The user is asked to enter a new password and reenter the password for confirmation.



ATTENTION:

Record the new password in a secure place.

It will not be possible to access the unit without this password. The factory password will be overwritten.

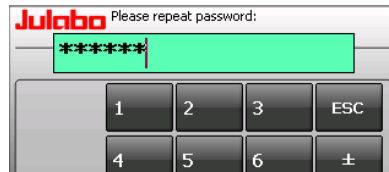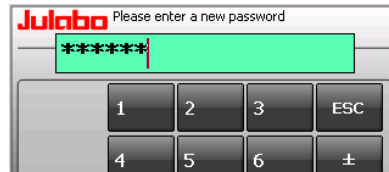


Forgot your password?

This can be resolved only through the >Service menu< Page 45.

The authorized service person can delete the stored password and reset it back to the factory setting.

3.2.2. User Groups - Managing Access to the Unit



Press the key  in > **Main menu** <.

The >**Unit account**< menu is displayed.

Press this button to login




Enter the password




Access to the unit is enabled for the respective user group. Permitted adjustments can now be performed.

Users can sign on with the password that has been assigned to them.

After login, all settings approved for the relevant user group will be accessible by everyone without reentering the password. Press "Lock unit" to prevent misuse.

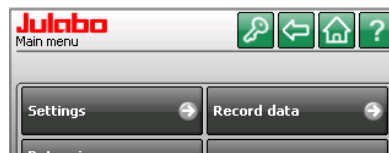

 Light gray buttons are blocked.

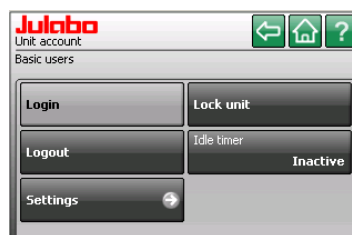


Block unit access immediately

Press the key



Block with time delay.


Press the key



Enter the desired time here, after which the unit will be blocked if no additional entries are made.


Example: 5 minutes.

Set time.

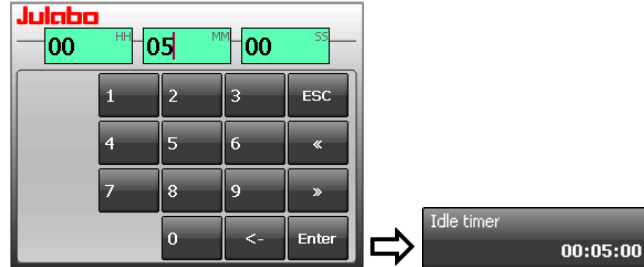


The current setting is shown on the button and will remain until changed.

Press the key



"Deactivate" time or "Edit" time.

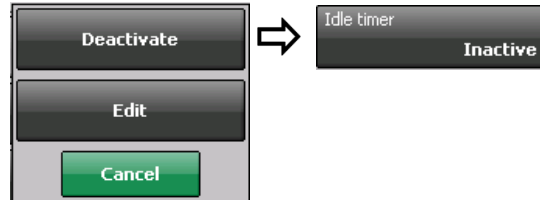


The unit will automatically switch to the normal display.



If someone attempts to use a locked unit, a window will open to notify the user that the unit is locked.

Example:

Press  to enter password

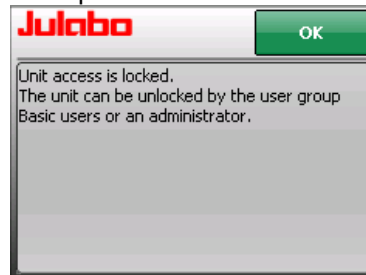

Access to the unit can be restored by entering the password of the user group that locked the unit or the administrator password. If an incorrect user group password is entered three times in a row, the administrator password will be required to enable the unit.

Enable access to the unit.


Press Logout to confirm.



After pressing >Logout<, access to the unit is re-enabled.

4. "Settings" menu

Select in the main menu




Select menu here




The buttons will display the current settings
or


indicate availability of a submenu:

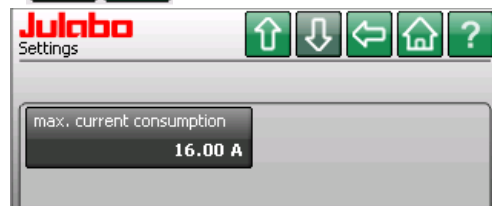

Example:

Call up the >Units< Help menu.

Press the  button and then press the >Units< button in the menu.

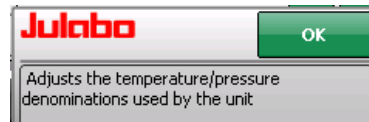

4.1. "Language" menu



Select language.




4.2. "Autostart" menu



Switch Autostart on/off

Allows the direct start of the temperature control systems via the mains power switch.

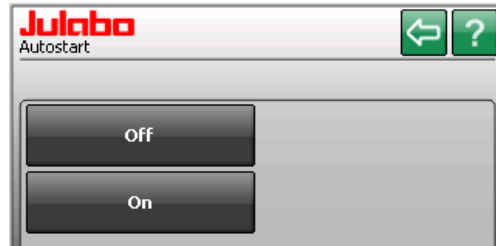

>Autostart<


Note:

The temperature system has been configured and supplied by JULABO according to N.A.M.U.R. recommendations. This means for the start mode, that the unit must enter a safe operating state after a power failure (non-automatic start mode). This safe operating state is indicated by "OFF", on the TFT-Display. A complete shutdown of the main functional elements such as heater and circulation pump is effected simultaneously.

Using the AUTOSTART function is only possible when a set-point is set via >TFT Display< and >EPROG-input<.

Should such a safety standard not be required, the AUTOSTART function (automatic start mode) may be activated, thus allowing the start of the instrument directly by pressing the mains power switch or using a timer.

4.3. "Units" menu



The buttons will display the current settings.



Select the temperature units



Select pressure units




Select flow rate units

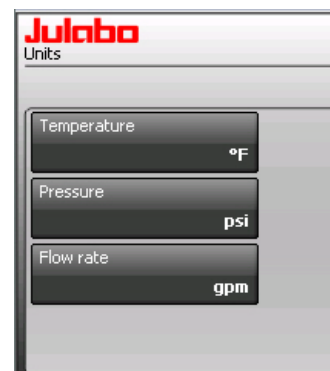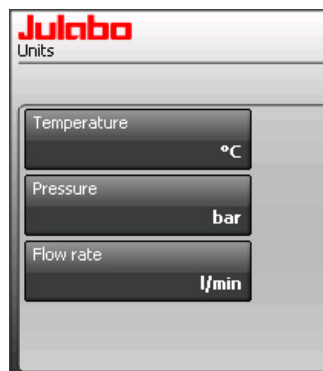

4.4. Menu Customize Home display

Two paths to the submenu
> Customize Home display <.


1. Via

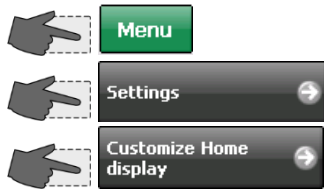

2. Touch the field. →

The sequence and choice of the values in the orange field can be changed.

ⓘ The partial area in the lower right is a keypad which turns orange when touched.

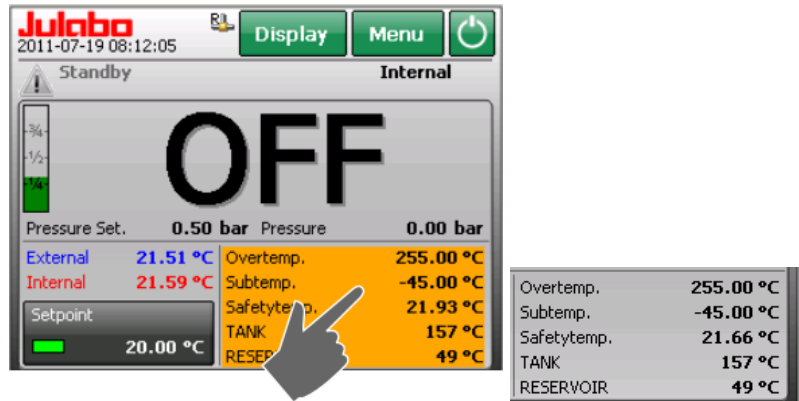

The current setting is displayed on the keypad. →

Choose value X.

Example: value 1

Choice of displayable values.



Push ↓ for further values.


Choose value and automatic return to > Customize Home display <.

Or push ↶ and leave the display without changes.


ⓘ Active key light green.




Setting via

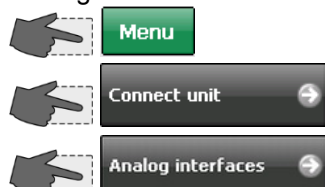


Example: Value 1 / Flow rate

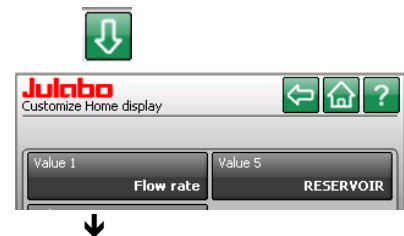

ⓘ Message in case of incorrect choice.




Whether >Pressure< or >Flow rate< are settable, depends on the setting of >JULABO Sensor Pres./Flow<.

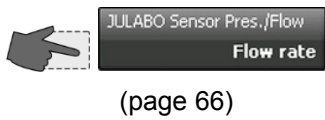

4.5. "Date / time" menu




Set date / time

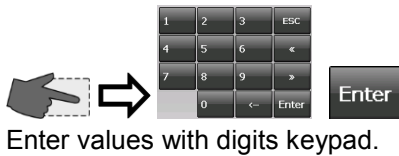

i Various options each are available for >Format< and >Separator<.

4.6. "Colors" menu



Select colors

You may select the colors used in the normal display's chart.



Use to change the settings in the selected submenu.

Red

Green (example at left, setpoint)


Blue

Confirm setting with .

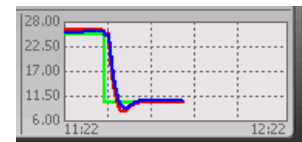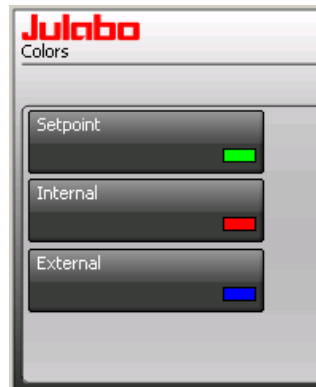

i In this way you can choose custom colors from the RGB color palette.

4.7. "Keypad tones" menu




Switch tones on/off

An audible tone will be emitted each time you press a button. Three different tone lengths are available.



4.8. "Info" menu

Select Info



Information on module configuration.

Examples



4.9. Max. current consumption menu



The buttons will display the current setting.



Enter values with digits keypad.

The maximum current consumption of the unit is preset at the factory.

An adjustment of this setting may become necessary if the fuse rating of the building installation is lower than the presetting.

Setting range see display of unit. ↓




5. "Determine thermodynamics" menu

Select in the main menu



Select menu here



 indicates available submenu.





5.1. "Adjust controller" menu




Select menu




The buttons will display the current settings or indicate availability of a submenu: .




Select desired control type

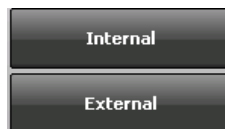


PRESTO™ temperature-control units let you choose between internal (inside the heat exchanger) or external (directly at the application or temp.-control loop) temperature control.

 Your selection is shown in the normal display.



5.1.1. "Self-tune" menu



Select setting




During self-tuning, the controlled process's parameters X_p , T_n , and T_v will be automatically determined and stored.

Available parameters:

Off - no self-tuning

The control parameters of the most recent identification are stored and will be used for control purposes.

Once - one-time self-tuning

The unit will perform a one-time identification of the controlled process each time the unit is started with the  button or via the start command through the interface.

Always - continuous self-tuning


The circulator will identify the controlled process at each setpoint jump.
Select this option only if the controlled system changes continuously.

5.1.2. Bandlimit Selftune

During self-tuning, it is important to prevent the speed of the temperature change in the rapid internal system (**PRESTO™**) from greatly exceeding the speed of the temperature change in the slower external application.

A bandlimit during self-tuning ensures that temperature changes in the unit (small mass) and in the application (usually larger masses) proceed uniformly. This applies to the heat up and cool down phases.

The maximum permissible temperature difference is defined with the value >Bandlimit selftune<.

 As long as >Bandlimit selftune< is engaged, the bandlimit will be switched off during external control (see >Lower/upper bandlimit<, page 29).



Set value



Example: 50 K

Setting range see display of unit. ↓



5.1.3. "Adjust control performance" menu



Select menu




indicates available submenu.

The buttons will display the current settings.

Select parameters



Set new values.



Preparing for external control:

Connect the Pt100 external sensor to the socket in the socket panel. It is normally not necessary to calibrate the sensor.

In special situations, a three-point calibration, for example, can be performed with the "Adjust sensors" function (see page 83).

Internal parameters



External parameters



or



Internal/external control parameters

In most cases, the factory-set control parameters will be adequate for achieving an optimal temperature sequence in the item being controlled.

Adjustable control parameters give you the ability to adapt to unusual processes.

Setting range:
internal/external
0.1 ... 99.9 K

Setting range:
internal/external
0 ... 10000 s

Setting range:
internal/external
0 ... 1000 s

Setting range:
0.1 ... 99.9 K

Proportional range >Xp<

The proportional range is the temperature range below the setpoint in which the heating capacity is controlled from 100 % to 0 %.

Reset time >Tn< (integral proportion)


Compensation for the control deviation that remains due to the proportional controller. Reset times that are too small may lead to instability. Reset times that are too large will make compensation of the control difference unnecessarily long.

Rate time >Tv< (differential proportion)

The differential proportion shortens the adjustment time. If the rate time is too small, equalization of an interference value will be extended and you will experience large overshoots when approaching a setpoint. If the rate times are too great, you may experience instability (oscillations).

Proportional range >Xpu<

The Xpu proportional range of the underlying controller is needed only for external control.

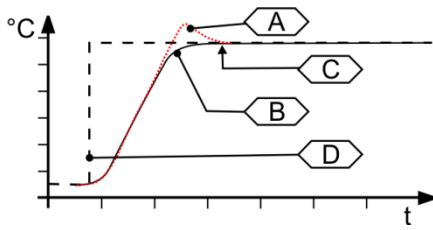

> **Dynamic** <


This parameter influences the temperature sequence only during **internal** control.

Available parameters:

Standard The temperature will climb faster, but may overshoot by up to 5%. If a ramp is defined, the temperature sequence will largely follow this ramp.


Aperiodic. Temperature will increase with time offset (no overshoots).

Both settings will achieve adequate temperature stability after approximately the same amount of time.

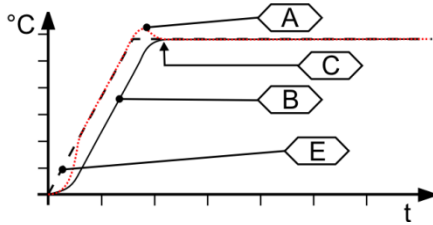

- A Standard
- B Aperiodic
- C Temperature stability
- D Setpoint
- E Temperature ramp

Setting range: 0.00 to 5.00

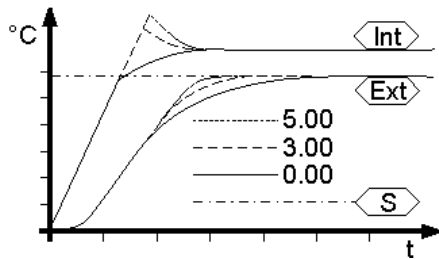

> **CoSpeed factor** <


This parameter will influence the temperature sequence only with **external** control.

The setting influences calculation of the control parameters during identification, thereby influencing control behavior.





- S Setpoint
- Ext External temperature
- Int Internal temperature

Optimization tips for PID control parameters

The progression of the control object's temperature over time can indicate improperly adjusted control parameters.

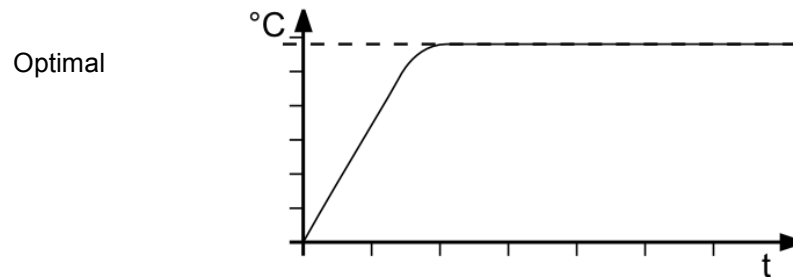

Improper adjustment may lead to the following heat-up curves:

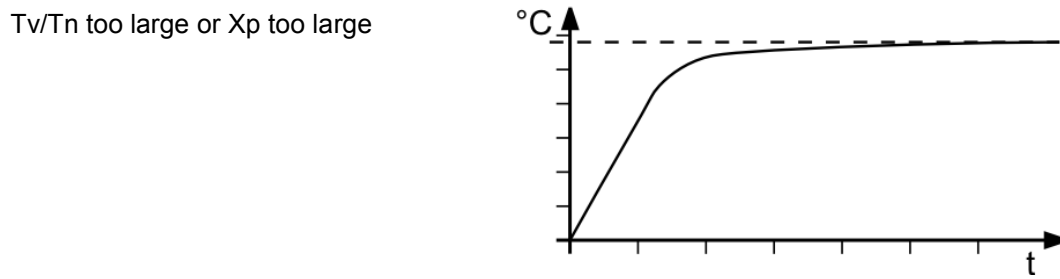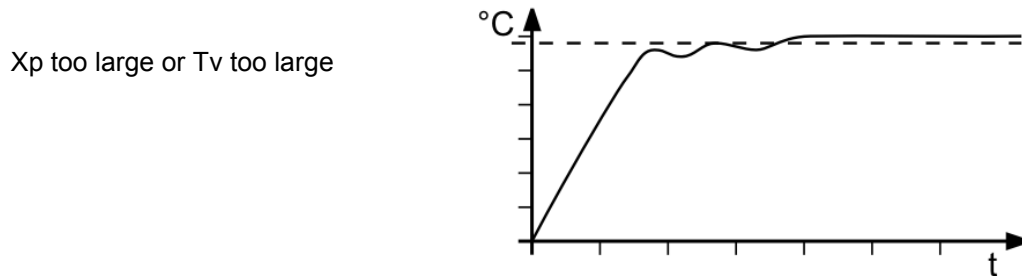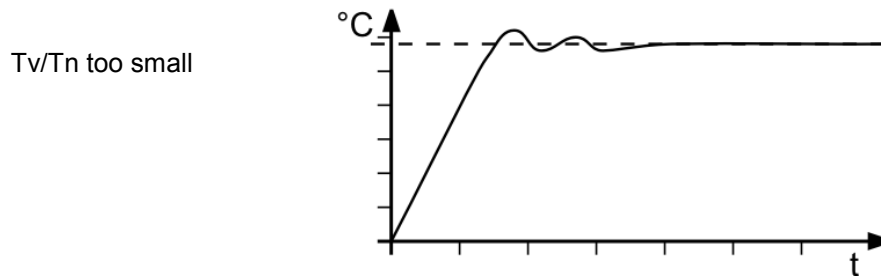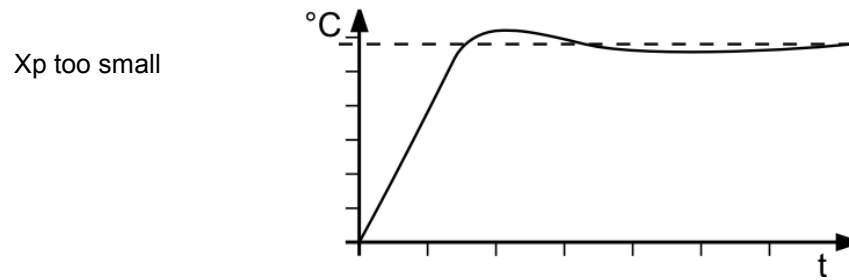

5.1.4. "Adjust limits" menu



Select menu




The buttons will display the current settings.

① Example: setting ranges see display of unit. ↓



The >Limits< menu allows you to define the minimum and maximum values for all important setting ranges and power variables.

The setting ranges depend on the performance category of the temperature control system.

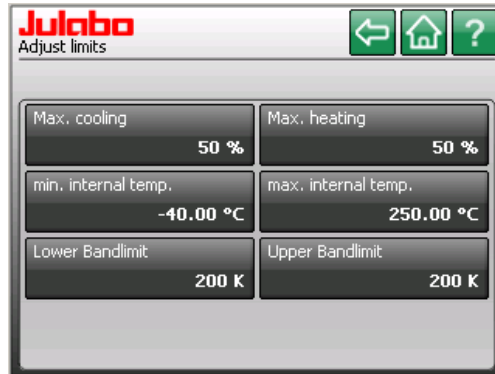

Selected maximum heating / cooling capacity

The unit's heating and cooling capacities are adjustable. 100% corresponds to the capacity specified in the technical data.

Setting range:

- Max. heating capacity 0 to 100% in 1% steps
- Max. cooling capacity 0 to 100% in 1% steps

Min. internal temp and max. internal temp

Maximum and minimum setpoint in internal bath.

The max. internal temp and min. internal temp limits apply only when using the "external" operating mode. Max. internal temp and min. internal temp define static limits for the anticipated temperatures in the internal bath. The temperature controller cannot exceed these limits, even if this would be necessary in order to achieve the desired temperature in the external system. In some situations this may prevent you from reaching the external setpoint.

Reasons for setting limits:

- Protect the heat transfer liquid from overheating.
- Prevent the high temperature cut-off >Error 14< from triggering an undesired alarm shutoff.
Set the > Internal max.< value at least 5 °C below the >High temperature cut-off (tank)< value.
- Protect the pump motor from excessive viscosity of the heat transfer liquid at low temperatures.


Lower bandlimit and Upper bandlimit

Bandlimits are active during external control.
Various settings are possible for the heat-up and cool-down phases as required.

Setting range: 0 °C ... 200 K

Legend:

- A Internal bath
- B External system
- C Upper bandlimit
- D Lower bandlimit

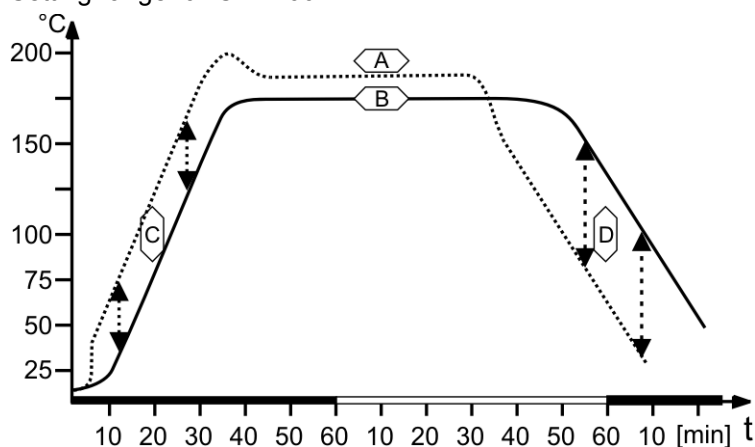

> **Upper bandlimit** < and > **Lower bandlimit** < define the maximum permissible temperature difference between the internal bath and the external system during the heat-up or cool-down phase, respectively.

During the heat-up phase, this difference value is always added to the current external temperature. During the cool-down phase, the difference value is subtracted.

Reasons for setting limits:

- Protect the object being controlled with gentle temperature control.
- Protect glass reactors or other objects from thermal tension.

i As long as >Bandlimit selftune< is engaged, the bandlimit will be switched off during external control (see page 24).


5.2. "Adjust pump" menu

Select



The buttons will display the current settings.

Select the pressure display in the **Units menu**: psi or bar
Page 19

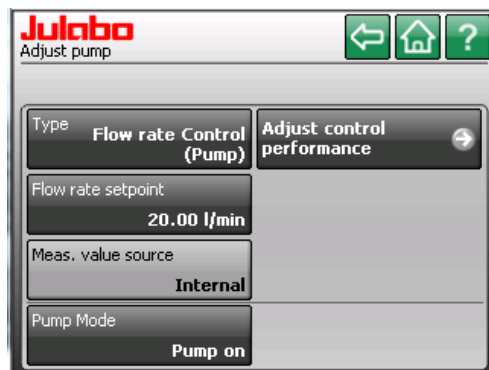

5.2.1. „Type“ menu

Select




Attention

Observe the external consumer's pressure limits!

Pressure limits refer to page 48
Set your value here.

Limit Pressure X.xx bar

Type of pump control.

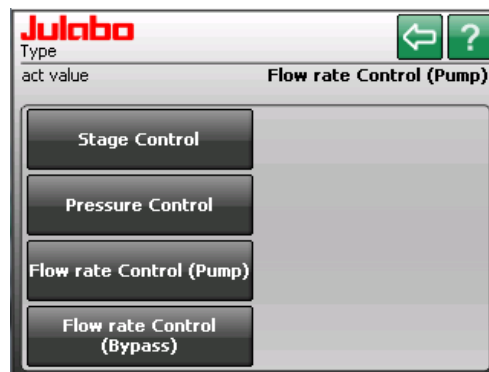

Pump control can be realized in different ways.

5.2.1.1. Type „Stage control“

Select



Change presetting in the respective submenu.


Select



Example: Stage 3


Adjustable in 5 stages. The number of stages depends on the temperature-control system's performance class and is displayed in the Pump Stage menu.

Each stage increases pressure in the system.

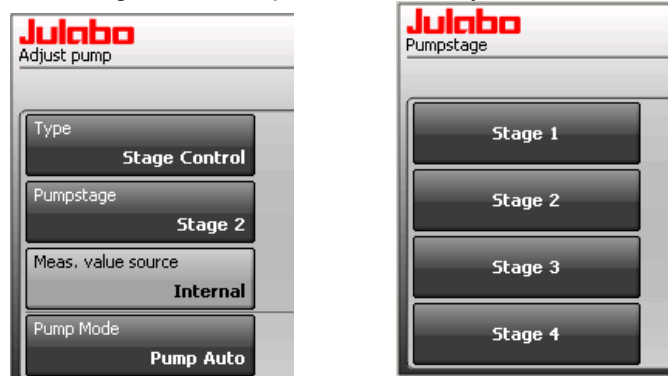

i PRESTO™ A30 has only one Pumpstage.

Notice
 Settings of setpoint limits for >Pumpstage< and >Limit Pressure< are active.

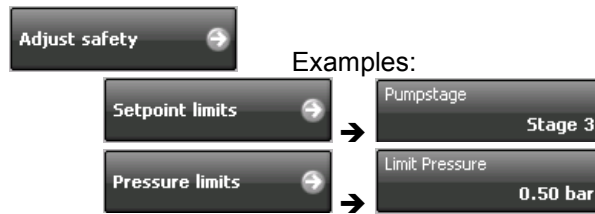


If the >Limit Pressure< is exceeded at >stage 3< an alarm including the cut-off of the unit is activated!

5.2.1.2. Type „Pressure control“

Select .



Set pressure setpoint.



Example „0.5“

The setting ranges depend on the performance category of the temperature control system.


Example: see display of unit. ↓



Setpoint limits
 refer to page 48



ⓘ Settings in the >" Adjust safety " menu< will influence these values. If a >Setpoint limit< is set, you will not be able to exceed or fall below this value, respectively. You will receive a message stating "Value is too small or too large"




Example:
 The displayed value, in this case „Max:0.65“, always refers to the next higher limit.

5.2.1.3. Type „Flow rate Control“

Select



Set value.




The flow rate is infinitely adjustable and is actively controlled.

The setting range depend on the performance category of the temperature control system.

Example:

Setting range see display of unit. ↓

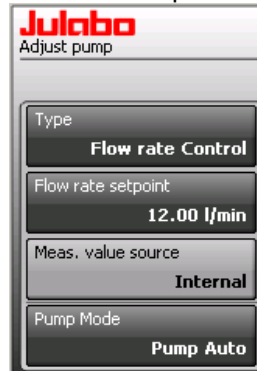

Example: 12.00 l/min



Check the selected pressure limits! (Page 48)


The selected pressure limits are monitored during flow control as well.

A high flow rate may exceed these limits and cause the unit to shut down.

ⓘ Refer to the operating manual of the utilized flow control unit for additional notes on possible flow rates.

5.2.2. "Pump Mode" menu

Select

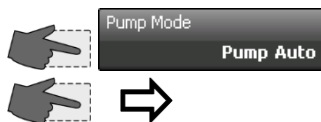

>Pump Auto<

The pump is controlled via the start/stop button or via the interface.

>Pump on<


Pump runs continuously.

>Pump after-run<

You must select the pump's after-running time.

>Pump after-run<

Set time.

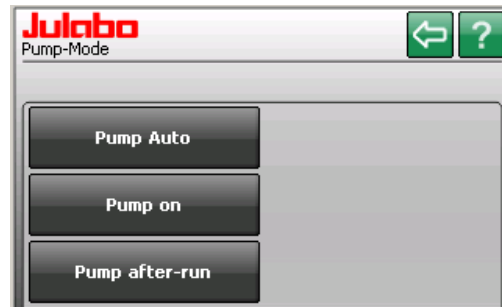

Example: 5 minutes



5.2.3. "Adjust control performance" menu

Select



Adjust control performance

For





Flow rate Control (Pump)

and





Flow rate Control (Bypass)

each of parameter Xp (Proportional range) and Tn (Reset time) can be set.

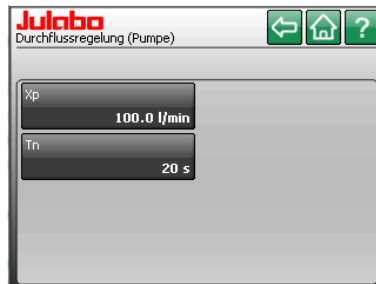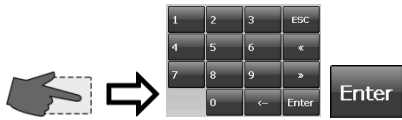

6. "Using a programmer" menu

Select in the main menu

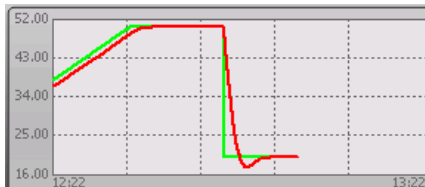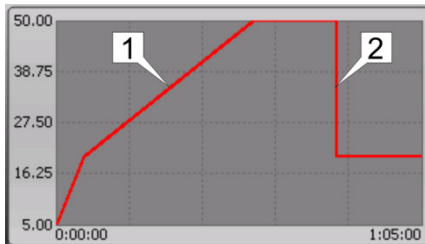

Setpoint = green

Actual value = red

Edit Profile:

Create or edit a temperature profile.

Start Profile:

Start a temperature profile.

Use programmer series:

This feature allows you to set a series so a certain profile will run at the same time on several different days.

A programmer makes it easy to quickly program setpoint temperature profiles. A profile is a series of temperature setpoints. A profile consists of several individual steps. Each step is defined according to a length of time (t:) or gradient (°/t) and target temperature.

The target temperature is the setpoint that will be reached when the step is complete. The programmer references time and temperature difference in a step to calculate a temperature ramp (1).

Attention:

If the time specification is too short, there will not be enough time to reach the setpoint. The programmer contains an easy way to handle this situation.

If a step time of 00:00:00 is entered, the setpoint will "jump" (2) to the target temperature as quickly as possible.

The profile will continue with the next step only after reaching the specified temperature (± 0.2 °C).

Eight profiles with up to 60 steps each can be stored.

The **Standard** and **Gradient** settings can be used together in a single profile.



6.1. "Edit a profile" menu


Create a new profile.

Press



Example:

Select profile 3 from profiles 1 to 8



You will use the following four menus to create a profile.

Edit:

Edit the currently selected step.
Change setpoint / duration.

Add:


Adds a new step to the profile at the end of the list.

Delete:

Delete the currently selected step.

Insert:

Adds a step to the profile in front of the currently selected step.

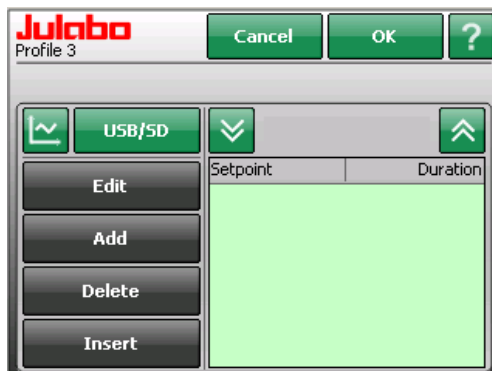


Import or export the profile to or from an external data carrier.



Scroll up and down in the >Setpoint / Duration< list or select the desired line by touching it with your finger.



Diagram of the selected profile.

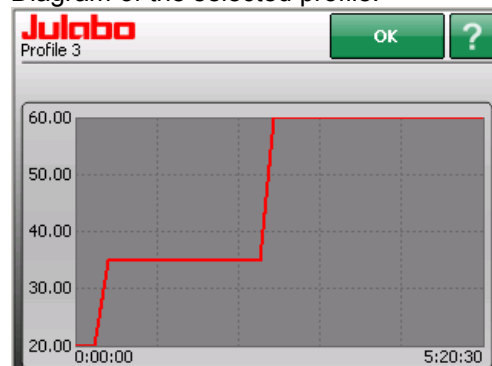

6.1.1. Add

Select




Now select
Standard or **Gradient**.



Standard: Set setpoint and duration.

Gradient: Set target temperature and gradient.

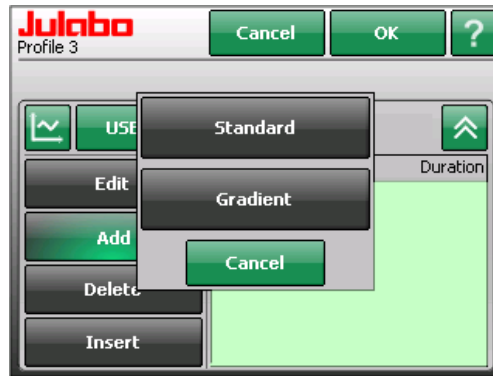

i Settings in the "Limits" menu will constrain the setting range. (Chapter 5.1.4. "Adjust limits" menu)

Examples: **Standard**

Temperature setpoint [°C/°F] and duration [hh:mm:ss]


Set **setpoint** and **duration**



20.00 °C --- 00:15:30

35.00 °C --- 00:10:00

35.00 °C --- 02:00:00

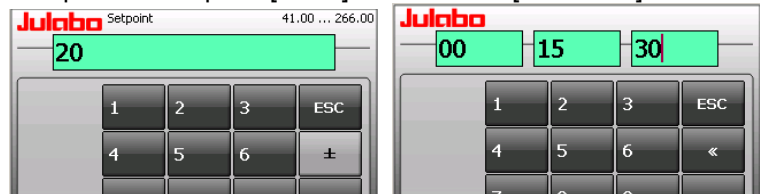

Examples: **Gradient**


Temperature [°C/°F]

and Gradient [°C/min]

Set **setpoint** and **gradient**




60.00 °C --- 2.5 °C/min

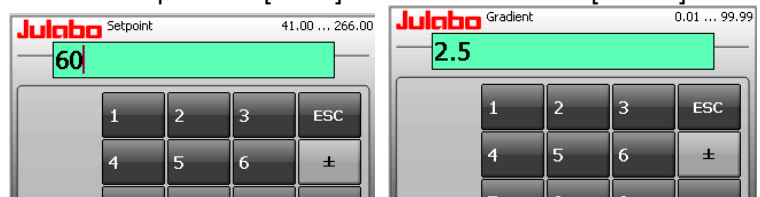


Attention: See Chapter „9.2. “Setpoint limits“ menu“

If the maximum temperature gradient per minute for heating / cooling is enabled, the range here is restricted.

The **Standard** and **Gradient** settings can be used together in a single profile.

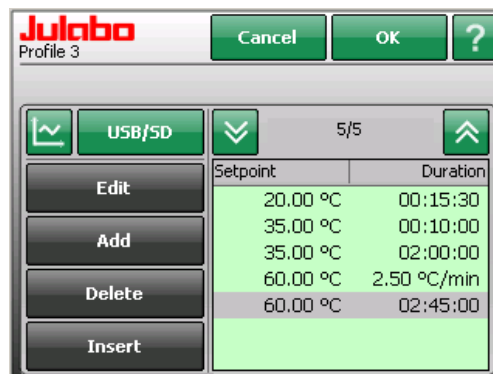

i Example: Step 5 of 5 steps is selected.



The currently selected step is saved.


6.1.2. Edit

Use   to select step.

Press




Set new values.

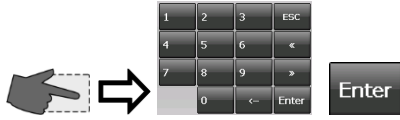

Edit the currently selected step.

Set new values.

Setpoint	Duration
20.00 °C	00:15:30
35.00 °C	00:10:00
35.00 °C	05:30:00
60.00 °C	02:50:00



Setpoint	Duration
20.00 °C	00:15:30
35.00 °C	00:10:00
35.00 °C	02:00:00
60.00 °C	02:50:00

6.1.3. Delete

Use   to select step.

Press



Delete the currently selected step.

Setpoint	Duration
20.00 °C	00:15:30
35.00 °C	00:10:00
35.00 °C	02:00:00


6.1.4. Insert

Use   to select step.

Press.




Set new values.

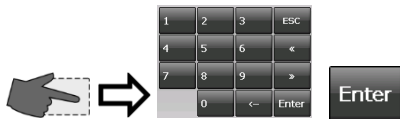

Insert a step in front of the selected step.

Setpoint	Duration
20.00 °C	00:15:30
35.00 °C	00:10:00
35.00 °C	02:00:00
60.00 °C	2.50 °C/min
60.00 °C	02:45:00



Setpoint	Duration
20.00 °C	00:15:30
35.00 °C	00:10:00
35.00 °C	02:00:00
50.00 °C	1.60 °C/min
60.00 °C	2.50 °C/min
60.00 °C	02:45:00



6.2. "Starting a profile" menu

Select.



Example:

Select profile 3

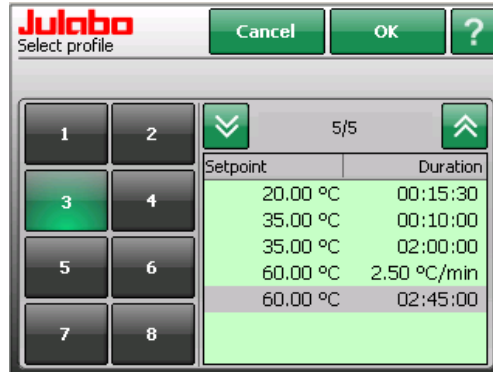

The buttons will display the current settings.

End of profile:

Status at the end of the profile (see page 40 for description).



Repeats:

A profile can be repeated up to 99 times.



Start time:


Start **immediately** with **OK** or define start time.




① 1 run + 2 repetitions (Loops) = 3 runs

① Refer to page 21 for date and time format.

Select




Set values.

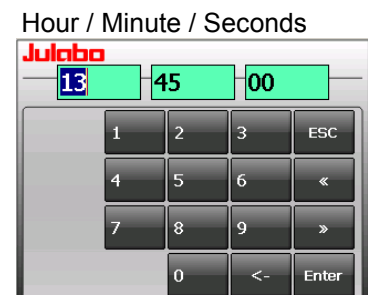

The >Start time< button will then display the current setting.

Press **OK** for normal view. The normal display will show the current time, the selected start time, and the remaining time until starting.

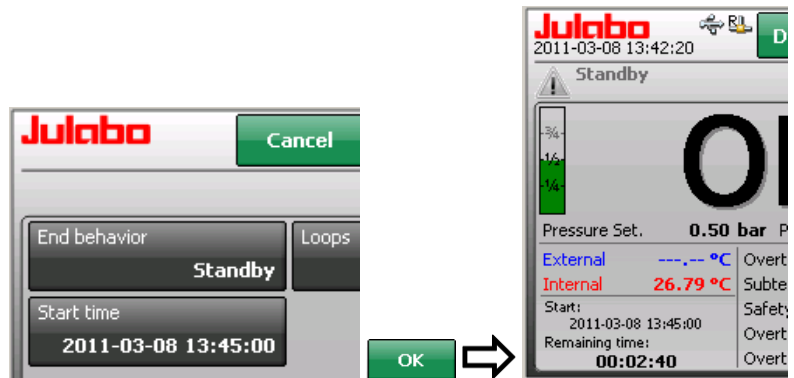


Before starting:

This area at the lower left is a button that turns orange when touched.

New buttons will then appear in the center of the screen.

You **can** still exit the start phase by pressing >Abort<.

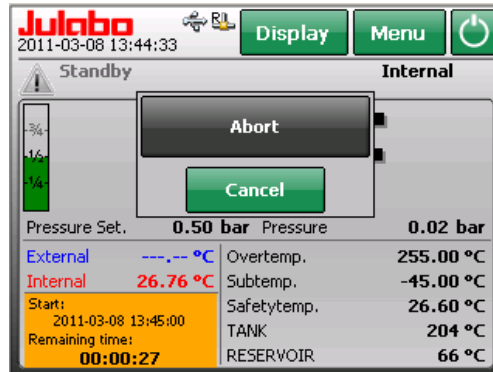

After starting:

The following values will be shown at the bottom left of the normal display:

- The computed setpoint
- The current step's remaining time
- Current step / remaining number of runs
- Time remaining in profile



This area at the lower left is a button that turns orange when touched.

New buttons will then appear in the center of the screen.

Pause/Resume

"Pause" will stop the progression of a profile.


Press "Resume" to restart.

Abort

The program will end; return to normal display.

Edit

Refer to >Edit a profile< on page 34.

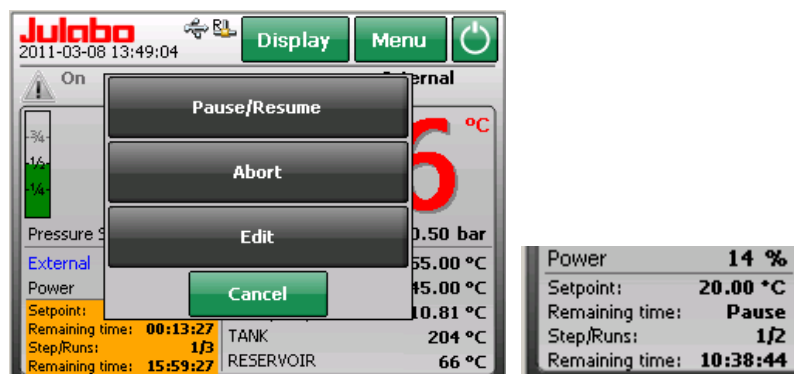

Pause/Resume

The setpoint and both remaining times will be paused. Visible on the display: Remaining time: **Pause**

End behavior


Here you can decide whether the unit will switch OFF at the end of a program or whether temperature control will continue. You also select the working temperature setpoint to be used at this time.

Standby

The unit will turn >OFF< at the end of the program.

PG setpoint

At the end of the program, the unit will continue to run with the final step's setpoint.

Press  to end or start a new program.

Start setpoint

At the end of the program, the unit will continue to run with the first step's setpoint.




6.3. "Using a programmer series" menu

Select



Use this function to run a profile at the same time on a series of days.

The buttons will display the current settings.

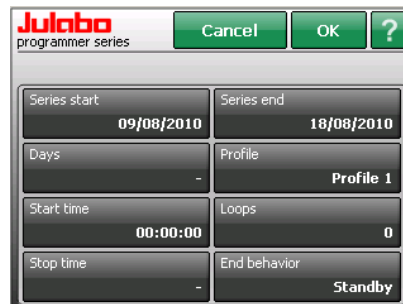

Press a button




Examples:

Day / Month / Year

Set the series start date.




Set the series end date.

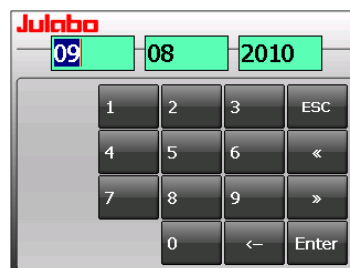

Select days



Select profile

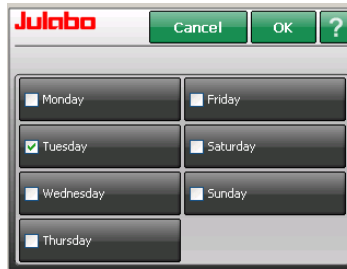

Set start time.




Set the number of times the profile will repeat.



Set stop time.



Set status at end of profile.

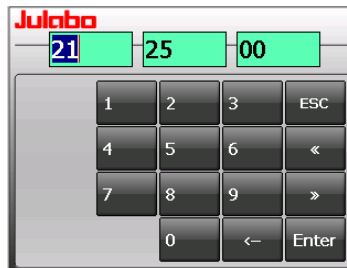

End of profile:

See page 40 for description

7. "Recording data" menu



Caution:

Danger caused by viruses on data carriers!

Only use data carriers which have been checked for viruses prior to use with temperature control systems.

Please integrate all data carriers in your quality management system.

Select in the main menu.



The menu >recording data< allows documentation of following important settings of the unit:

Date, time, setpoint, internal actual value, external actual value, performance, pressure, status.

2011-02-28	15:32:21	40.00	22.69	-	0	0.51	1
2011-02-28	15:32:22	40.00	22.70	-	0	0.51	1
2011-02-28	15:32:23	40.00	22.71	-	100	0.51	1
2011-02-28	15:32:24	40.00	22.72	-	100	0.50	1
2011-02-28	15:32:25	40.00	22.73	-	100	0.46	1
2011-02-28	15:32:26	40.00	22.74	-	93	0.45	1
2011-02-28	15:32:27	40.00	22.82	-	81	0.45	1
2011-02-28	15:32:28	40.00	23.08	-	74	0.46	1
2011-02-28	15:32:29	40.00	23.53	-	69	0.46	1
2011-02-28	15:32:30	40.00	24.10	-	68	0.47	1
2011-02-28	15:32:31	40.00	24.67	-	68	0.48	1
2011-02-28	15:32:32	40.00	25.19	-	69	0.47	1
2011-02-28	15:32:33	40.00	25.60	-	71	0.48	1
2011-02-28	15:32:34	40.00	26.00	-	72	0.48	1
2011-02-28	15:32:35	40.00	26.46	-	74	0.49	1


Transfer to a computer to evaluate the data.

Please insert data carrier., e.g.


USB stick.





Start recording



Sampling time is set to one row of data per second.



Set sampling time to desired value.

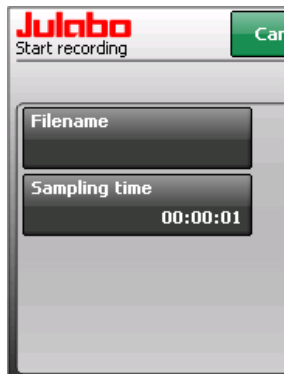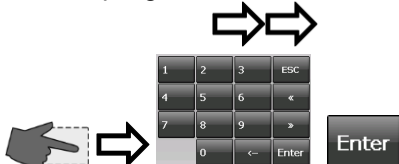

Continue with



Select data carrier



- SD card

- USB stick



If only one data carrier is inserted, the unit will recognize and display it on the <Storage> button.

If both interfaces are occupied, the user can choose between them.



Select the existing >txt< file



and



The file will be overwritten.

or

Create a new file.



Select file name




and



e.g. „test_1“.

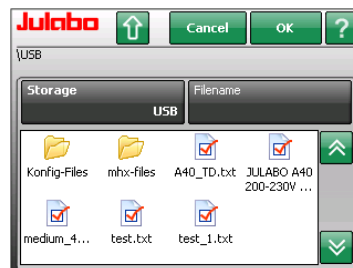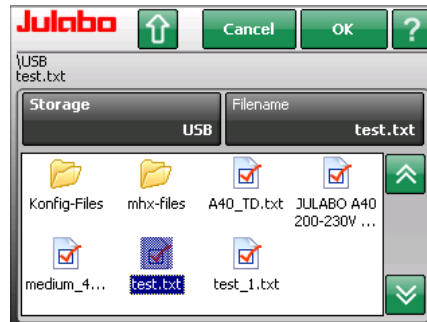

Start recording

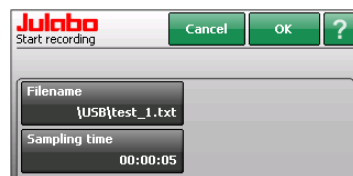

ⓘ A disc icon in the standard display indicates active data recording.


Select in the main menu.



Stop data recording.



Confirm the help text.

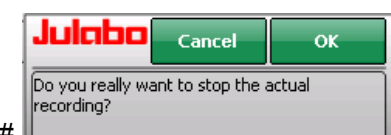


7.1. JULABO Service – Online remote diagnosis

The >Record data< menu also contains a function for saving black box data.


JULABO PRESTO™ units are equipped with a so-called "black box". It is integrated into the controller, where all relevant data of the most recent 30 minutes are recorded.

This data can be exported when servicing the unit. To receive rapid and competent assistance, e-mail the file to our service department at service@julabo.com.

Please insert data carrier, e.g. USB stick.

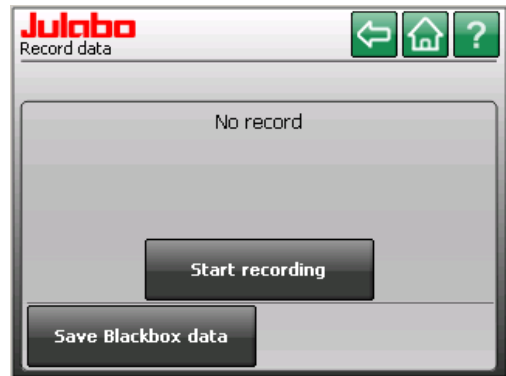

The file name will be generated automatically. Unit designation, mains voltage, frequency, barcode number

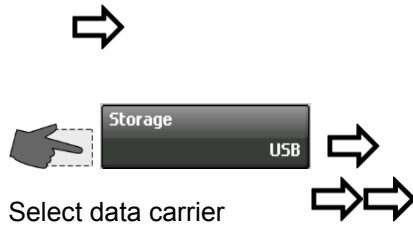

Select data carrier





The file is created.



Start the recording



Recording active

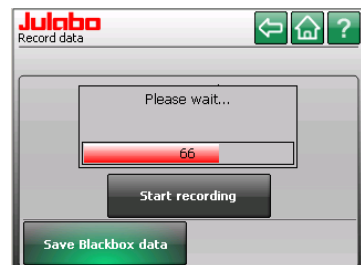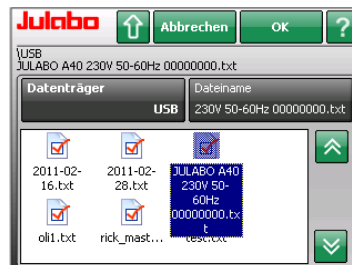

Connect data carrier to a PC and transfer the txt file.

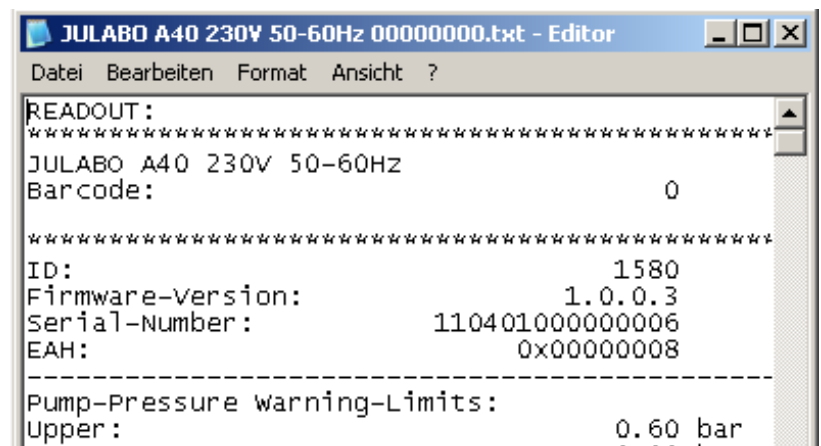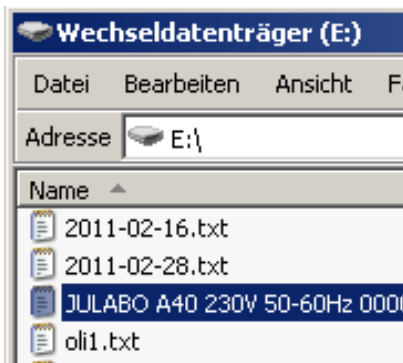

8. "Service" menu

Select in the main menu



This menu is password-protected. It is accessible only by authorized persons.



9. "Safety adjustments" menu

Select in the main menu.



Select menu



indicates available submenu





i Setting ranges depend on the performance class of the temperature control system.

9.1. "Temperature limits" menu



The buttons will display the current settings.
Choose button and set value.

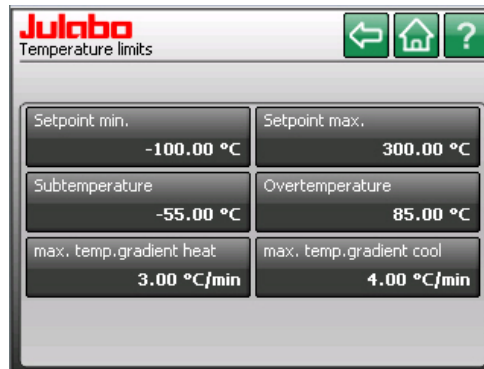


9.1.1. Minimum and maximum setpoint

Select



and set value.



Minimum and maximum setpoint:

Limits the selectable temperature range.

The selected working temperature values must be between the limit values defined here.

Example of a message after attempting to set a temperature that is lower than 5.00 °C:




9.1.2. Subtemperature, Overtemperature




The buttons will display the current settings.

Choose button and set value.

The lower and upper temperature warning functions flank the working temperature value. As soon as the actual temperature crosses one of the preset limit values, an acoustic warning signal will be emitted.

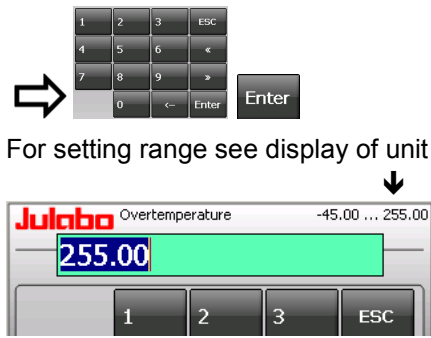

For setting range see display of unit

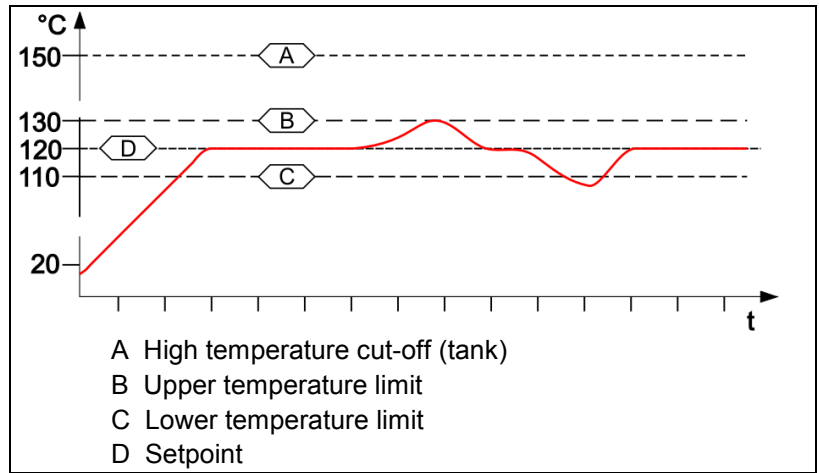

- A High temperature cut-off (tank)
- B Upper temperature limit
- C Lower temperature limit
- D Setpoint



The warning function will be activated only when the temperature value is within the selected limit values for three seconds after starting from the "OFF" condition.


9.1.3. Allowed temperature gradient per minute

Maximum allowed **temperature gradient** per minute during **heating up / cooling down**.


When the gradient limiter is activated, a setpoint step is executed as a gradient with the values selected here.

This feature is valuable e.g. to safely implement temperature changes with a sensitive glass reactor.


- Activated limitation is shown as ticker on the regular display.

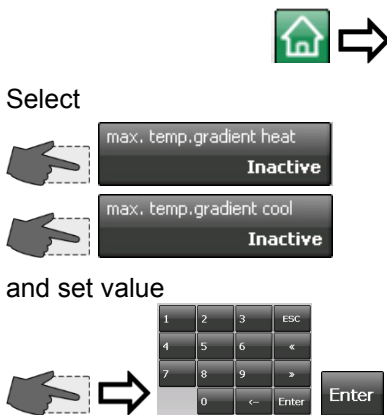


Select

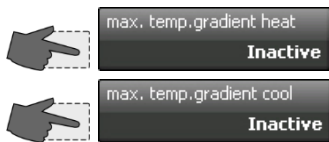


and set value



For setting range see display of unit

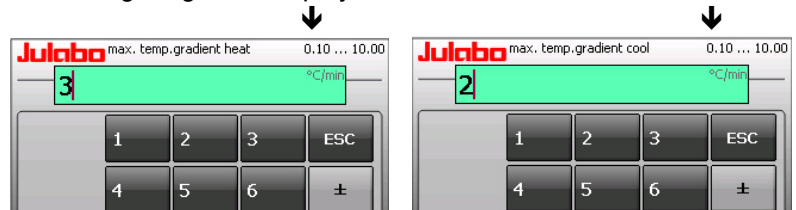

The buttons will display the current settings



Choose button and edit value or deactivate the function.



Attention:

The setting range for **>Gradient<**, in the chapter of programmer, is limited by these values (page 36).



9.2. "Pressure limits" menu



The buttons will display the current settings.

Choose button and set value.




For setting ranges see respective display of unit.

Example:



Hierarchy of pressure values

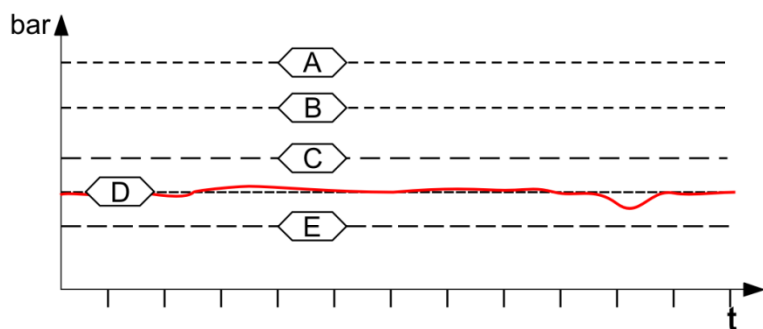


- A Peak Pressure Limit
- B Pressure limit
- C Upper warning limit
- D Actual pressure in temperature system
- E Lower warning limit

9.2.1. Permissible Pumpstage

Select



and choose a stage

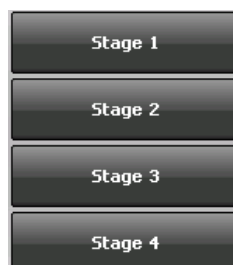


The **pump stage** can be limited here.

> **Stage control** < Refer to page 30

9.2.2. Permissible pressure Setpoint


Select




The **maximum pressure** can be limited here.

Limits the setting > **Pressure control** < refer to page 31

and set value.




For setting range see display of unit

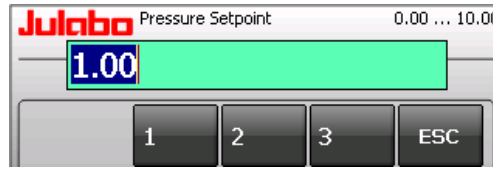


- ⓘ The setting ranges depend on the performance category of the temperature control system.

9.2.3. Upper and lower pressure warning limit

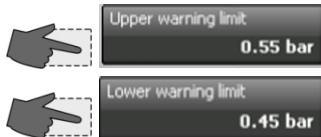

The buttons will display the current settings.


Choose button and set value.



A >upper warning limit< and a >lower warning limit< can be set for monitoring the pressure in the system. If a warning limit is exceeded or undercut a signal will sound and a warning appears on the TFT-Display.

Warning:

Ticker in the status line

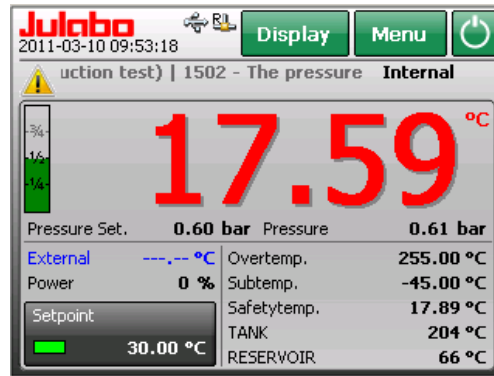

If the pressure setpoint is too close to the warning limit, the warning will appear continuously and fill the list of errors.



Touch the icon and the list of errors will be displayed. →




9.2.4. Upper and lower pressure warning limit



The buttons will display the current settings.


Choose button and set value.



For the pressure setpoint following limits must be set.

The **>limit pressure<** sets the upper limit.

Exceeding this pressure for more than 5 seconds, results in an alarm cut-off and an error message (Error 302).

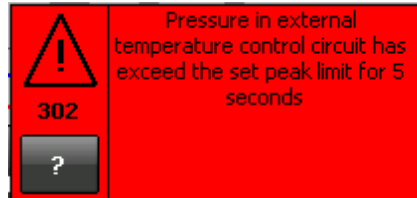


Alarm:

Alarm messages are shown in a red window.

Achieving the **>Limit Pressure Peak <** results in an alarm cut-off and an error message (Error 301).


Press **< ? >** button for help text.

9.3. Flow limits




The buttons will display the current settings.

Choose button and set value.




9.3.1. Min. and max. flow setpoint

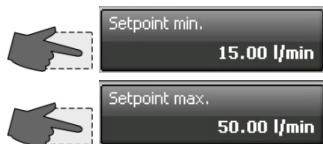

The buttons will display the current settings.

Choose button and set value.




Min. and max. setpoint:

Limits the selectable flow range.


The selected flow values must be between the limit values defined here.

9.3.2. Upper and lower flow warning limit

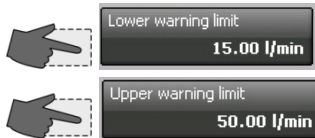

The buttons will display the current settings.

Choose button and set value.




A **>Lower warning limit<** and a **>Upper warning limit<** can be set for monitoring the flow rate (l/min) in the system.



If a warning limit is exceeded or undercut a signal will sound and a warning ticker appears in the status line on the TFT-Display.

The setting range is displayed .

Example: Display setting range ↓

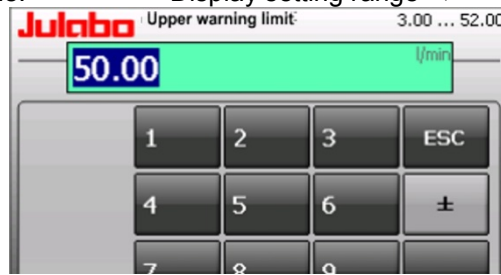

10. "Connect unit" menu

Select in the main menu.



The buttons will display the current settings.

Select menu here



indicates available submenu.

Use this menu to select how the unit is controlled and how control variables are set.

The digital interface settings can be adjusted here.



10.1. "Remote control" menu


Switching remote control on and off.




Choose between **>Off<** (normal control) or remote control via **>RS232<** or remote control via **>USB<** or remote control via **>Ethernet<** or remote control via **>Modbus TCP/IP<** Internetprotocol..

The unit can be controlled remotely through the digital interfaces.

ⓘ Use an interface cable to connect the unit to a PC.

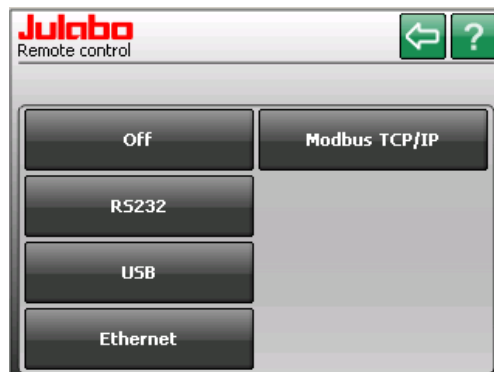

ⓘ The letter **>R<** in the normal display indicates remote control:



ⓘ

Connections are behind the venting grid on the front side of the unit.



Ethernet



USB



SERIAL

RS232



10.2. „External setpoint“ menu

Select external setpoint



Choose between

>Off<

>Pt100<

>EProg<



In addition to the serial interface via remote control the unit offers the possibility to adjust the setpoint via analog interface >EXT. Pt100< or >REG+E-PROG<.

Possible parameters:

Off - Setpoint is set via the touch screen or via the integrated programmer. (factory setting)

Pt100 - Setpoint setting via the analog socket „EXT Pt100“ using an external temperature sensor or an appropriate voltage/current source.

EProg - Can only be adjusted when an electronic module with analog connections is used (option). Setpoint setting via the analog interface REG+E-PROG connection with an external voltage or current source or a programmer.



REG+E-PROG

Important:


- ① Connect the external voltage or current source or a programmer to the circulator via the socket REG+E-PROG (see page 75).

10.3. "Actuating variable" menu

The variable is the degree to which the heater or the refrigeration unit is activated. The bath is heated or cooled in accordance with this variable. If this is controlled via the unit's control electronics, referred to as the **>Controller<**, the bath temperature will be brought precisely to the selected setpoint and stabilized at that temperature.

i The unit must be in Start mode in order to input variables in the **>Digital<** and **>EProg<** positions.

Selecting how variables are inputted.



Choose between inputting variables via **>Controller<**
or
>Digital<
or
> EProg<.



Possible parameters:

Controller –The internal control electronics of the unit controls the heater and the connected cooling unit.
Self-tuning is possible. (factory setting)

Digital –The unit receives the control signal via the digital interfaces.
Self-tuning is not possible.

EProg - The unit receives the control signal via the E-Prog input.
Self-tuning is not possible.
- Setting requires electronic module.

10.4. "Digital interfaces" menu

Select in the main menu



Select interface




The buttons will display the current settings.



10.4.1. RS232

Select



Check the interface parameters of the two interfaces (Unit and PC) and make sure they match.

Digital interfaces settings



Use an RS232 interface cable to connect the unit to a PC.

Parity:

none, odd, even

Baud rate: [Baud]

- 1200 19200
- 2400 38400
- 4800 57600
- 9600 115200

Handshake:

none, software, hardware



Factory settings:

- even
- 4800 Baud
- Hardware handshake

10.4.2. Watchdog

Watchdog function



This temperature system provides a watchdog function for monitoring the digital interface (RS232, USB, Ethernet) with the temperature system being in remote control mode.

In case of a disturbance/failure in the superordinate data system the watchdog function ensures the temperature system enters a defined operating state.

In the defined operating state the temperature system accepts the watchdog setpoint as setpoint for continuing temperature control.

The watchdog setpoint **must** thus be set to an uncritical value depending on the application task

To activate the watchdog function the remote control must be switched off first.




Select Watchdog





Activation of the watchdog function:

1st Adjust the >Watchdog as described on page 56.

2nd Set the desired interface in the >Remote control< menu.

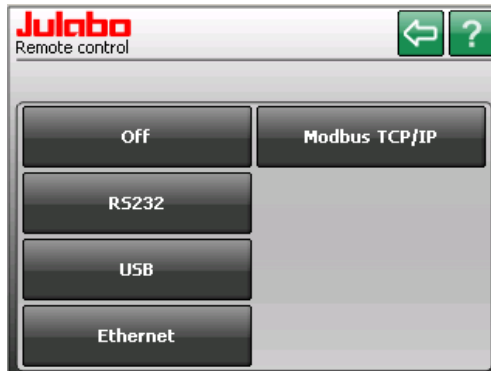

3rd In the >Actuating variable< menu, choose between >Controller< or >Digital< .

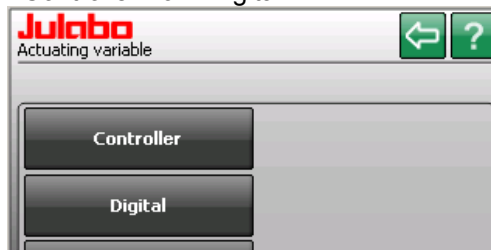


Choose >**Controller**< to define a setpoint (temperature).
Choose >**Digital**< to define a variable

4th The interface command – out_sp_06 – sets a watchdog setpoint.

- ① The watchdog function is activated as soon as a valid working temperature setpoint or a valid variable is received via interface.
The values are valid (plausible) providing they lie between the upper temperature limit and the lower temperature limit.
(Refer to „ Safety adjustments" menu page 46)
- ① If the temperature control system does not receive a valid command for an extended period of time (> set timeout time), the watchdog function is triggered.

- A High temperature cut-off (tank)
- B Upper temperature limit
- C Lower temperature limit
- D Setpoint (out_sp_00 -15.00) [°C]
- or Variable (out_sp_10 xxx) [%]
- E Watchdog function is triggered
- F Watchdog setpoint (out_sp_06 -18.00)

Example:

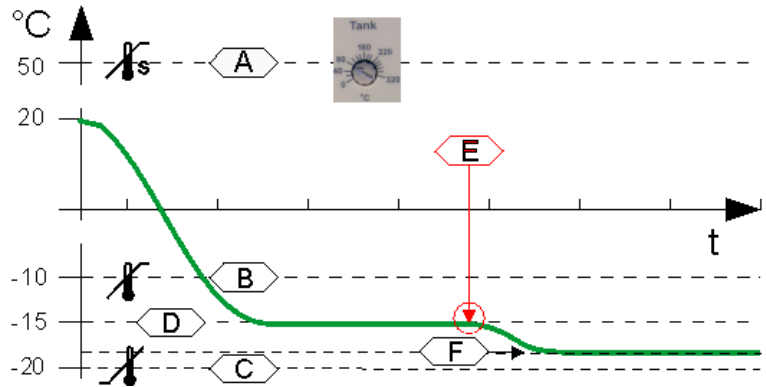

Touch the icon to mute the signal.
See warnings on page 10




Consequence:


- A buzzer sounds and the message 1501 „Timeout serial interface “ appears on the TFT-Display.
- The unit accepts the watchdog setpoint as valid setpoint for temperature control.
- If the warning symbol is touched during setting of the variable, the most recently received variable will be re-used.
- If another plausible variable is sent after activation of the Watchdog function, this variable will be used. Reset the warning by touching the symbol.

Configuring the Watchdog Function


The device can be switched into a defined operating status in the event of a timeout.

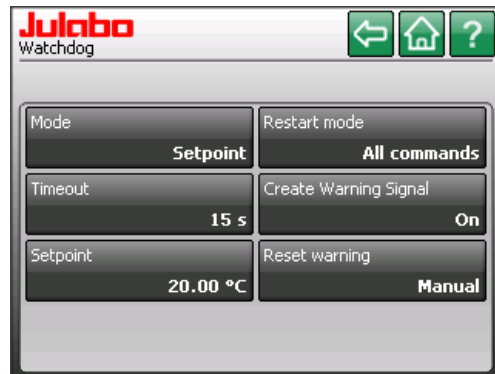

Mode



The mode in the event of a timeout can be set here.
The following options can be selected:
Off:
Watchdog function inactive
Setpoint:
If a timeout occurs, the device adjusts to the set safety setpoint
Standby:
If a timeout occurs, the device is switched into standby.



Timeout


The timeout time in seconds can be set here. The watchdog must be reset within the timeout time, otherwise, a timeout is triggered.

Setpoint value

The safety setpoint value can be set here. If a timeout occurs and the watchdog mode is set to "Setpoint", the device adjusts to this setpoint

Restart mode:

Here, the commands can be set that trigger a watchdog reset. (They are thus used to prevent timeouts).

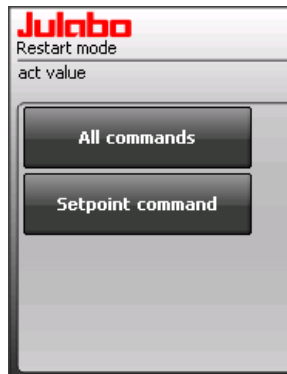

The following options can be selected:
All commands:
 Every received valid interface command resets the watchdog.
Setpoint command:
 Only the "Setpoint" command (OUT_SP_00) resets the watchdog.

Create Warning Signal:

Here it can be set, whether a warning should be shown on the display, when a timeout occurs.



The following options can be selected:
Off:
 The warning is not shown on the display.
On:
 The warning is shown on the display.

Reset warning:


Here it can be set, whether the warning displayed due to a timeout occurrence should be reset automatically on receipt of a new valid command.



The following options can be selected:
Manual:
 The user must acknowledge the warning manually on the display.
Auto:
 The warning is reset automatically if a valid command is received.

10.4.3. Ethernet

With the Ethernet interface, you can use a PC to communicate with the PRESTO™ unit over an Ethernet network. You can connect the PPRESTO™ to a network or use a network cable to establish a direct connection between the PC and PRESTO™.




Attention:

Please contact a network administrator before connecting the PRESTO™ to your network!

The PRESTO™ will recognize when it has been attached to a network. An icon (📶) will appear in the normal display.


Ethernet menu

Select Ethernet

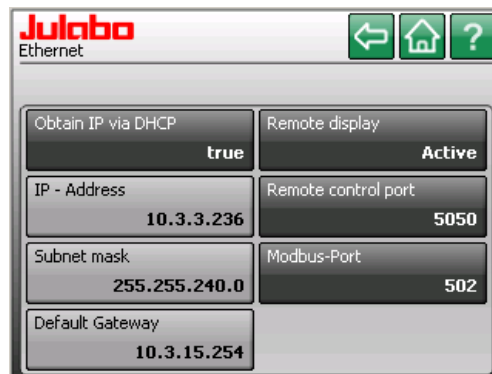

Obtain IP via DHCP

ⓘ Light gray buttons are blocked if > **true** <, accessible if > **false** < (switch to dark grey).




DHCP (Dynamic Host Control Protocol) facilitates dynamic assignment of IP addresses. If your network contains a DHCP server, then you can use this server to configure the PRESTO™'s network settings. If you do not have a DHCP server in your network, or if you wish to connect the PRESTO™ directly to a PC, you will have to manually set the IP address, subnet mask, and possibly the default gateway.

>**true**< The IP address, subnet mask, and default gateway will be automatically requested from a DHCP server.

>**false**< Parameters set manually


IP address:



Example: 10.3.3.236
Addresses such as x.x.x.0 and x.x.x.255 are not permitted.

The IP address is used to identify the unit in the network. Every IP address in a network must be unique. IP addresses are used to send data from one network device to another. The IP address consists of a four-byte number, with each byte separated by a dot. It is divided into a network part and a device part, with the subnet mask handling the division.

Subnet mask:



Example: 255.255.240.0





Default Gateway:



Example.:10.3.15.254

Remote display:

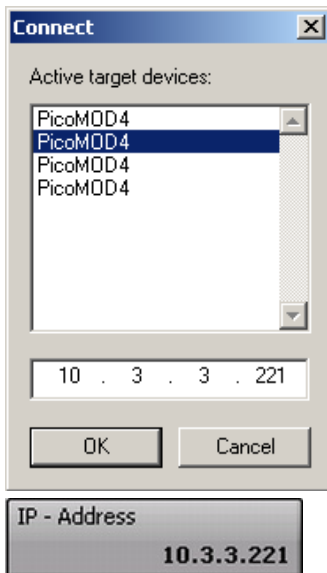

The subnet mask is a bit mask that indicates which part of the PRESTO™ IP address represents the network and which part represents the device.

If a bit is set to "1" in the subnet mask, the corresponding bit belongs to the subnet mask; otherwise, it belongs to the device address.

In the example, the part 10.3.3.236 of the IP address would define the subnet and the last part 2 would define the device address. The final byte of the subnet mask can be set so that it belongs partially to the subnet and partially to the device address. For example, a subnet mask of 255.255.240.0 would mean that the first two bytes belong completely to the IP address and from the third byte the first 4 bits belong to the subnet. In this case, the device address would consist of the last 4 bits of the third byte and the entire fourth byte.

Remark:


The subnet part and the device part may not be mixed with each other. For example, a subnet mask of 255.240.255.0 is not permitted.


The default gateway serves as the communications interface between your own network and other networks.

If you wish to communicate with a PC that is not located in the same network as the PRESTO™ (subnet mask), this communication will always pass through the gateway.

The remote display allows you to remotely control the PRESTO™ using a PC.


At the PRESTO™, switch the **Remote Display** menu item to

active and start the  program on your PC. Then click on **File** → **Connect**. A dialog window will appear that lists all of the devices found in the network.

 It may take a few seconds before all devices in the network are found and added to the list. Please wait until your device is displayed.

When you click on one of the PRESTO™ in the list, that unit's IP address will appear in the lower field of the window. Please compare the IP address of the selected PRESTO™ with the settings in the **Ethernet menu** of the PRESTO™ you wish to control remotely.

When **Remote display** is **active**, the letter **R** will be added to the icon in the main window. This does not mean that remote control via ethernet is activated.

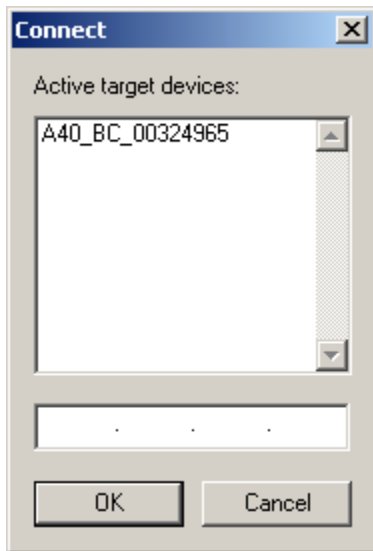

Attention!
 Active target devices

Several devices may be attached to the Ethernet simultaneously. You have the option of giving each device a name in order to more easily distinguish between the various devices. See page 87

Select the PRESTO™ and click on 

You can use your mouse to control and monitor the unit from the PC screen.



The remote control port provides communication between the control system and the PRESTO™ using the same commands as those used for communication through the RS232 interface, for example.




Attention:
 Some ports are already occupied and may not be used. Please contact a network administrator before changing the settings on the PRESTO™!

Example:


Communication between a PC and PRESTO™

LabVIEW:

The easiest way to enable communication between a PC and PRESTO™ is with VISA from NI-LabVIEW. In addition to the unit's IP address, you must also indicate the port:

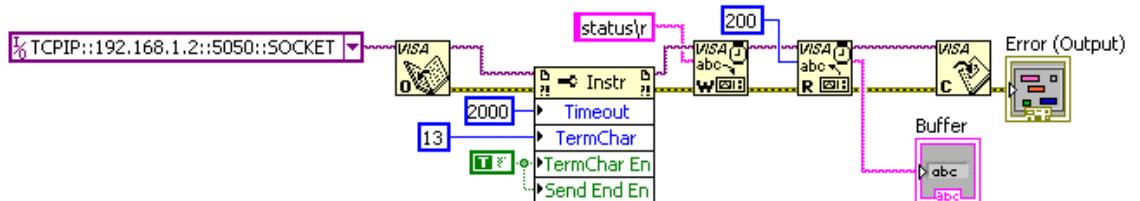


Network-based connection

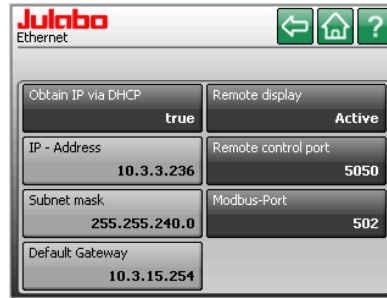

Obtain IP via DHCP

>true<



If you would like to connect the PRESTO™ to your network and your network has a DHCP server, then the PRESTO™ will be automatically assigned an IP address.

To enable this, set the item **Obtain IP via DHCP** to >true<. Connect the PRESTO™'s network socket to a socket in your network. The PRESTO™ will be automatically detected in the network and the DHCP server will issue an IP address. A few seconds later, this IP address will appear in the PRESTO™'s menu.

Obtain IP via DHCP

>>false<



You can also assign a fixed IP address to the PRESTO™. To do this, set the item **Obtain IP via DHCP** to >>false< and manually enter into the PRESTO™'s Ethernet menu the IP address, subnet mask, and, if required, the default gateway.


Attention:

Most networks have certain address ranges that are reserved for the issuance of fixed IP addresses. Please contact a network administrator before changing the settings on the PRESTO™!


Remark:

When manually setting network parameters, you must always enter both the IP address and the subnet mask. The settings will be shown in the display only after both parameters have been entered!

Modbus-Port page 102



Creating a Direct Connection between PRESTO™ and PC

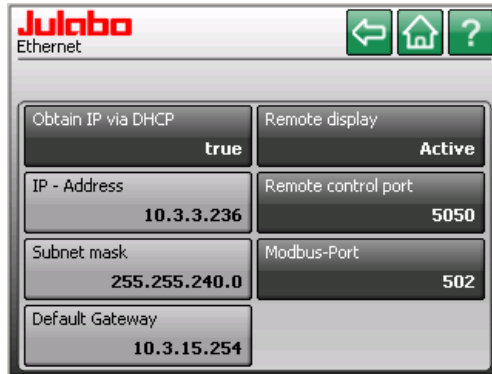

To establish a direct connection between PRESTO™ and a PC, you must manually enter the IP address and subnet mask. A default gateway is not required.

Additionally, the IP settings of the PC must match the IP settings of the PRESTO™ for communication to be established.

PC and PRESTO™ must be located in the same subnet, but have different IP addresses.

Example settings:

PC:

IP address: **10.3.3.236**
 Subnet mask: **255.255.240.0**

PRESTO™:

IP address: **10.3.3.236**
 Subnet mask: **255.255.240.0**

Explanation:

The subnet mask 255.255.240.0 indicates that the first three parts of the IP address define the network.

The IP addresses of the two devices differ only in the final part of the IP address, which (according to the subnet mask) defines the device part of the IP address. Accordingly, the two devices are located in the same network (**10.3.3.**).

PC Settings (Windows XP)


The following section provides an example of how to manually change the IP settings in Windows XP. The procedure may differ slightly depending on your operating system.



Attention:

Modifying network settings may prevent your PC from working properly in the network. Please contact a network administrator before changing the network settings!


"Connect unit" menu

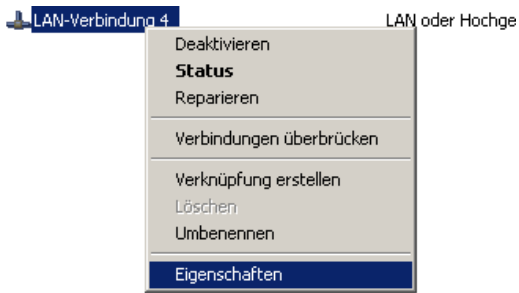


To change the IP settings on your PC, click on **Start→Settings→Control Panel**.



Double-click on **Netzwerkverbindungen** and open the properties page for the network connection that you want to use to connect to the **PRESTO™** to the PC. To do this, right-click on the network connection and select **Properties**.

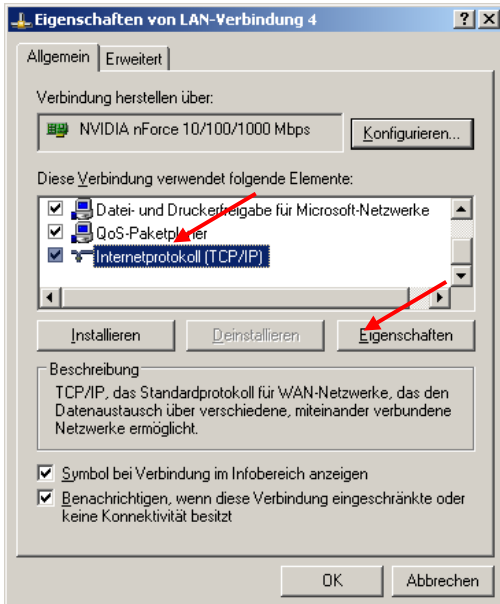

Under **This connection uses the following items:** click on **Internet protocol (TCP/IP)** and click on **Properties**.

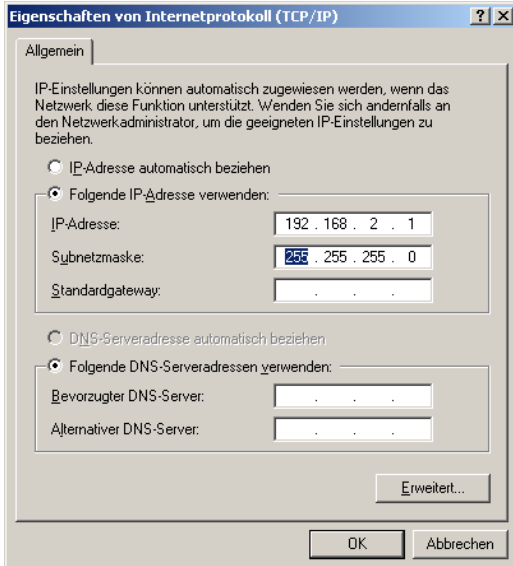

To manually enter the IP address, activate the item **Use the following IP address:** and enter the IP address and subnet mask into the appropriate fields.

Confirm the settings by clicking on **OK**.

10.5. "Analog interfaces" menu



Select menu



The buttons will display the current settings.




indicates available submenu



i If the electronic module has not been installed, the key >Analog Module< will not be displayed in this menu.

10.5.1. Alarm output



The buttons will display the current settings.




Breaking capacity
 max. 30 W / 25 VA
 with turn-on voltage
 max. 30 V_{DC}; max. 25 V_{AC}
 with switching current
 max. 1 A

Socket on the front



Alarm output: Output for external alarm signal.

This contact is a potential-free change-over contact. All of the unit's operating conditions can be sent externally via settings in the >Alarm output< menu without modifying the plug connection.

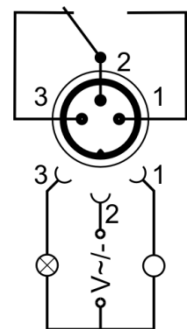


Setting **Standby**, **Alarm**, **Alarm+Stdby** or **Pump on** connects pins 2 and 3.

Setting **Standby / Inverted**, **Alarm / Inverted**, **Alarm+Stdby / Inverted** or **Pump on / Inverted** connects pins 2 and 1.

10.5.2. JULABO Sensor Pressure / Flow



External sensor signal



Switch the external sensor signal on and off.




The **value** to select the sensor connected to the JULABO Pressure/Flow Sensor jack. ⇒

>Off<

>Pressure<, signal from an external pressure sensor, or

>Flow< signal from an external flow sensor.



The **filter time** is set to 1 second as default. The filter time may be increased (0 - 1000 s) to display the value with greater stability.

Note: This will increase the reaction time if the system is controlled by the pressure or flow value.





Sets the measurement which corresponds to a **4 mA input signal**



Sets the measurement which corresponds to a **20 mA input signal**

Attention

The socket may be used with original JULABO accessories only. Any other use may damage the unit's electronics.

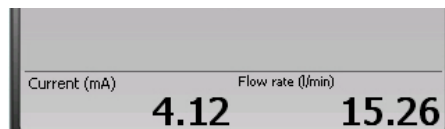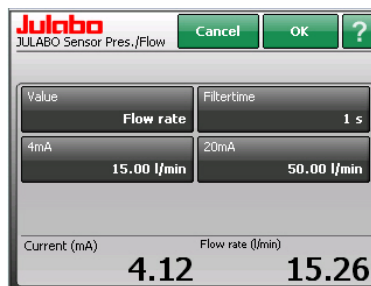


The value on the left is the current measurement at the present time whilst the one on the right is the pressure or flow value calculated using the current settings.

Preparations

Connect the external sensor to the 4-pin jack on the rear of the device.

To display the value, refer to page 20

Jack on the rear
JULABO Sensor
Pressure / Flow

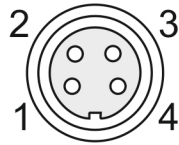

Accessories:


Pin	Signal
1	Reserved, do not use
2	Reserved, do not use
3	4...20 mA
4	GND (0 V)


Attention
 If using an external pressure sensor, the unit and the application must be at the same height.

Order No.	Description
8980771	External pressure sensor M24x1.5 male
8980772	External pressure sensor M30x1.5 male
8980773	External pressure sensor M38x1.5 male
Flow sensors appropriate for PRESTO™:	
8981021	M+R adapter M24x1.5 external with Pt100
8981022	M+R adapter M30x1.5 external with Pt100
8981023	M+R adapter M38x1.5 external with Pt100


10.5.3. Bypass Control with CAN Option and JULABO Pressure / Flow Sensor

Bypass control is required if small mass flow rates of the bath fluid should ensure high power transfer. The flow sensor is connected to the Julabo pressure/flow socket for bypass control. Control is realized via a CAN bus connection. The CAN interface module is provided in PRESTO devices instead of the electronics module with analog connections.

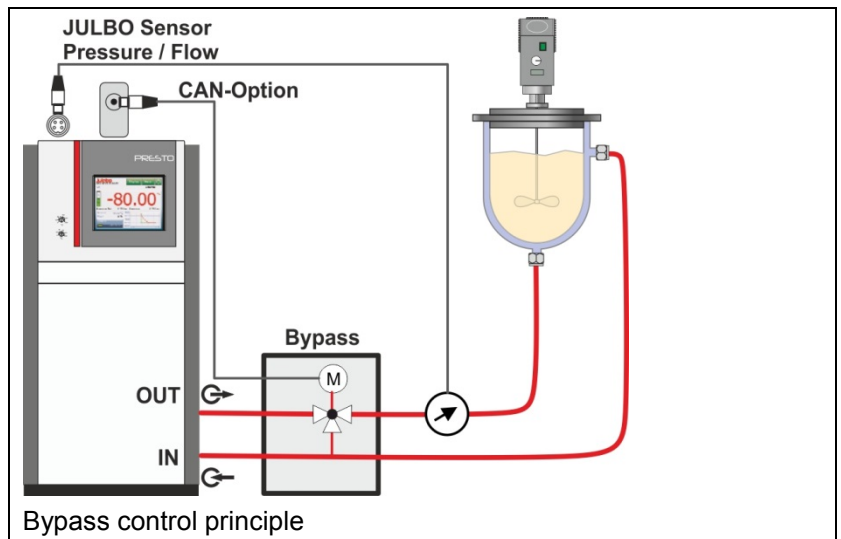



The bypass connection on the CAN bus is marked with the  icon on the top left (at the JULABO lettering). To use the bypass, an external flow sensor must be connected via the JULABO pressure/flow socket.

Go to the "Analog Interfaces" menu.

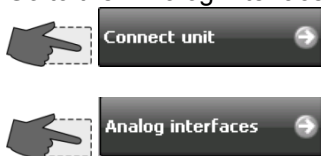

"Connect unit" menu




The current value must be set to flow.

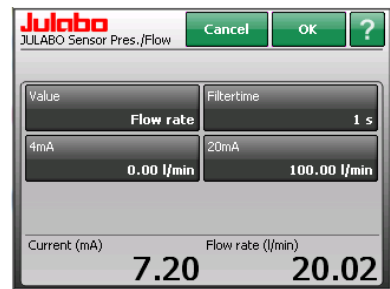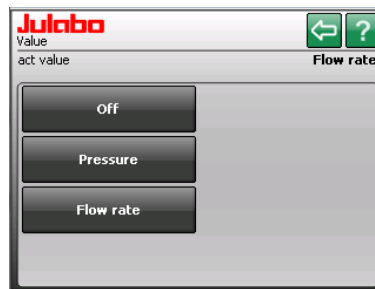


The 4 mA and 20 mA values must be defined according to the connected flow sensor. The filter time can be adjusted by the user.




Next, the bypass control can be activated in the "Determine thermodynamics" menu. To do this:

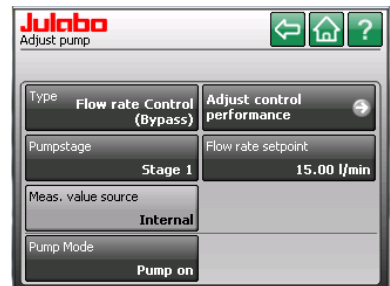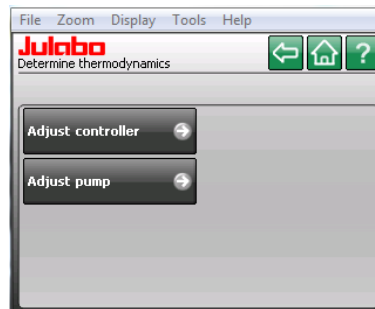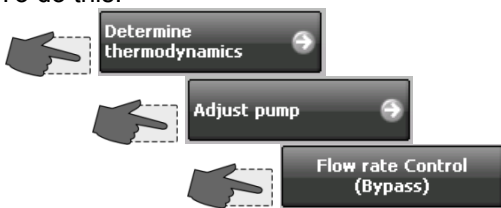

The activated bypass control can be

recognized on the red  icon (at the JULABO lettering). With this control, the pump is automatically adjusted to stage-based control. The stages can be freely selected.

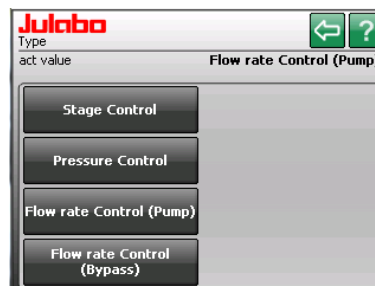


The flow rate values can be adjusted in the requested pressure stage (1-4).




10.5.4. Pump control


The flow rate of the bath fluid can be adjusted via the pump as well. Similar to bypass control, a flow sensor must be connected to the JULABO pressure/flow socket and configured.

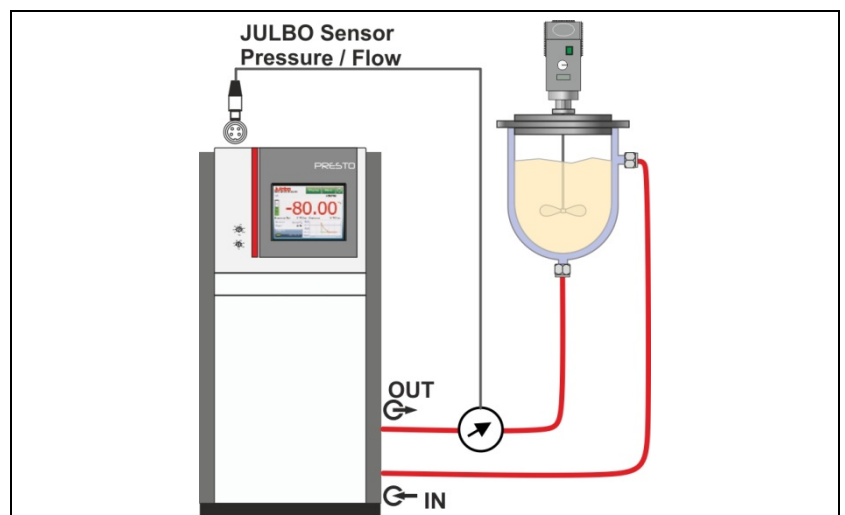

Go to the "Analog Interfaces" menu.

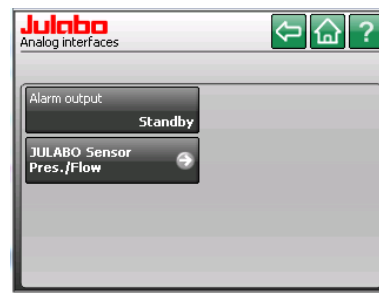


The current value must be set to flow.

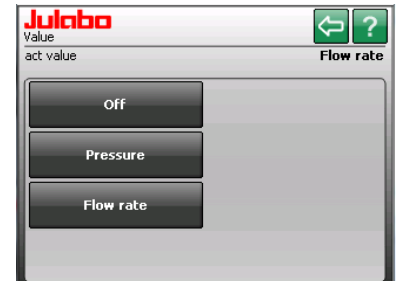


The 4 mA and 20 mA values must be defined according to the connected flow sensor. The filter time can be adjusted by the user.



Next, the bypass control can be activated in the "Determine Thermodynamics" menu.

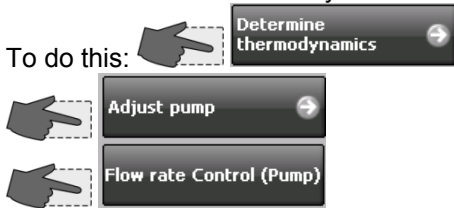

Enter the requested flow rate.

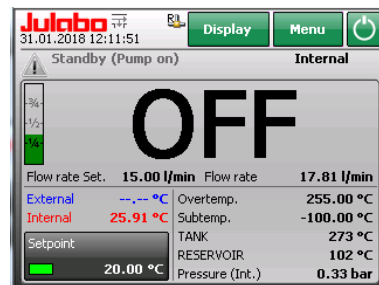

10.5.5. EXT Pt100 2 (accessory)




The socket **EXT Pt100 2** on the rear side of the unit is available as an accessory. (not on A30)

Accessories:

Order No.:	Description
8900106	Module with Pt100 connector

10.5.6. Analog module (optional)

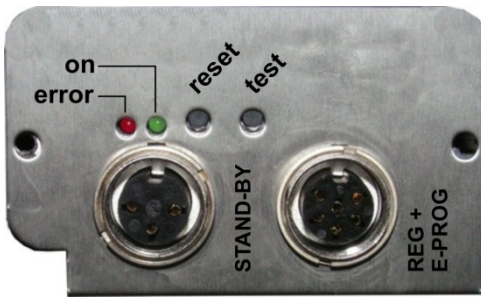

The analog module has two circular female connectors.

6a Female connector **Standby** input external „off“-key).

6b Female connector **REG+E-PROG** with three logging outputs and one input for an external programmer or other voltage and/or current sources.

i Information regarding labeling:

test For service purposes only. This key has no function during regular operation.

reset The module can be „reset“ with this key. This may be necessary in case of an error, for example if the red LED (error) lights up.

on ●

Green LED is illuminated

The module has operating voltage but does not receive any information (CAN-Messages).

Green LED is not illuminated

The unit is turned off or the module is damaged or it has no power supply.

Green LED blinks

Irregular blinking indicates that the module receives information (CAN-Messages) and works correctly.

error ●

Red LED is illuminated

Alarm of the module. The TFT display shows the type of error and required measures.

Red LED is not illuminated

If the unit is operating and the diode is not illuminated the module works correctly.

Red LED blinks

An unknown error has occurred during the data transfer on the CAN-Bus. The CAN-Bus has deactivated itself for safety reasons. Turn the unit off and then on again after several second. If the error occurs again, please contact JULABO service.




The buttons will display the current settings.



Standby connector

Select



Choose between


>Inactive<

or

>Active<



Standby

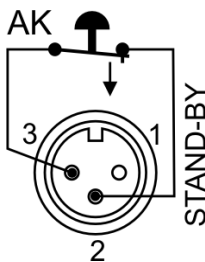

Press  to start.

Activate the standby input:

1. Under menu item >Standby<, set the parameter to >Active<.
2. Connect an external contact "AK" (e.g., for external switch-off) or an alarm contact of the superordinated system.


If the connection between pin 2 and pin 3 is interrupted by opening the contact "AK", a complete shutdown of the circulating pump and heater is effected, and the unit enters the condition "E OFF".

If the contact is closed again, the unit remains in status "Extern-OFF".



REG+E-PROG connector

REG+E-PROG

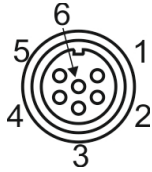

Only SELV entrance
(Safety Extra Low Voltage)

Three logging outputs and one input for an external programmer:

1	Chan. 1	voltage output	0..10 V
2	Chan. 2	voltage output	0...10 V
3	Gnd	for outputs	0 V
4	EProg	external programmer input	0...10 V / 0...20 mA
5	Chan. 3	current output	4...20 mA / 0...20 mA
6	Gnd	for programmer	0 V

Outputs of the connector

(Description on page 74)



(voltage output)

Push value




First define output value for channel 1.



Example:

Confirm with **OK**

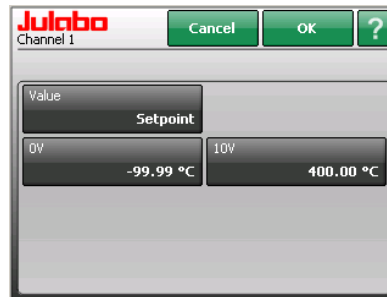

Define scale:

Assign the value to 0 V.



Assign the value to 10 V



Assign the lowest value which is to be emitted to 0 V, the highest to 10 V (in the example on the right: °C).

The setting is displayed on the keypad.

Examples:



Channel 2 (voltage output)
 Same procedure as channel 1.
 First define output value for channel 2 then define scale.




Channel 3 (current output)

Push value. →
 First define output value for channel 3. → →
 Confirm with **OK**.
 Push current range →



Then define current range for channel 3 → →
 Confirm with **OK**.

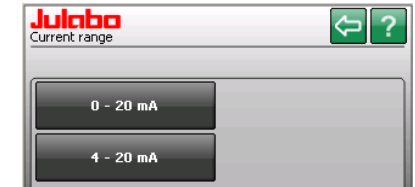


Define scale:

Set value for 4 mA .
 and **Enter** →
 Set value for 20 mA
 and **Enter** → →
 Assign the lowest value which is to be emitted to 4 mA, the highest to 20 mA (in the example on the right: °C).

Example: current range 4 – 20 mA



The setting is displayed on the keypad.

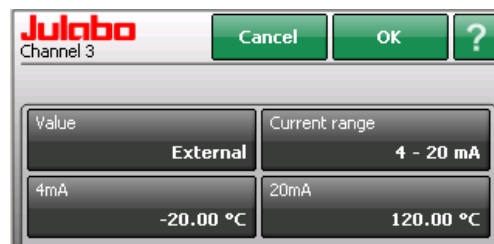



Outputs of the connector - **Reg+E-Prog**

First define the desired output value for channels 1 to 3:

- Setpoint** active setpoint temperature
(setpoint / integr. programmer/external programmer)
- Internal** internal actual temperature value (bath temperature)
- External** external actual temperature value (external sensor)
- Power** periodic or intermittent heating or cooling
- Pressure** actual pump pressure at unit
or
signal of external pressure sensor
at socket **JULABO Sensor.Pressure/Flow**
- Flow-through** signal of external flow-through sensor
at socket **JULABO Sensor.Pressure/Flow**

1. First define the desired output value for channels 1 to 3:


Channel **1 and 2**: output for temperature (°C) / power (%) / pressure (bar, psi) / flow-through (l/m)

Assign the lowest value to be emitted to 0 V
the highest value to 10 V

Channel **3**: Output for temperature (°C) / power (%) / pressure (bar, psi) / flow-through (l/m)

Assign the lowest value to be emitted to 0 mA and/or 4 mA,
the highest to 20 mA.

2. The current output (channel 3) offers 2 ranges for selection:
0 to 20 mA or 4 to 20 mA.

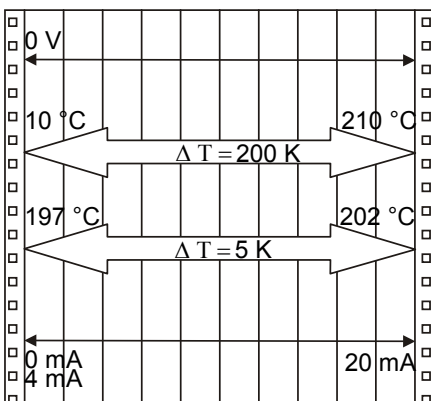

Examples:

lowest temperature value: 10 °C
highest temperature value: 210 °C
Fig. shows 200 °C scaled to paper width
slope: 50 mV/°C

lowest temperature value: 197 °C
highest temperature value: 202 °C
Fig. shows 5 °C scaled to paper width
slope: 2000 mV/°C

EProg - Input

Setting is necessary if

1. the Setpoint is to be set via an external voltage or current source or programmer
For this, in the menu > **Connect unit** <, first set the menu item > **external setpoint** < to >EProg<.
2. the heater variable should be controlled via an external control pulse.
For this, in the menu > **Connect unit** <, set the menu item > **Actuating variable** < to >EProg<.



or



i The EProg input can only be used either under menu item > **external setpoint** < or under menu item >**Actuating variable** <.

- Connect the external voltage or current source or programmer to the REG+E-PROG socket of the unit.

Select input variable (value): (Step 1 see below)

Setpoint in °C or °F
Power in %

Selecting the signal: (Step 1 see below)

Voltage voltage input
Current current input

The programmer (EPROG) input of the unit can be matched to the output signal of the external voltage or current source.

Set >Lower value<: (Step 2 see below)

Set the desired lower value at the external signal generator and wait for approx. 30 seconds.

Then set this value also via the numeric keypad of the unit and confirm by pushing **Enter**.

Set >Upper value<: (Step 3 see below)

Set the desired upper value at the external signal generator and wait for approx. 30 seconds.

Then also set this value via the numeric keypad of the unit and confirm by pushing **Enter**.




Important:
 The usable temperature range between the „lower value“ < and the > upper value < is limited to the configured working temperature range of the unit (see technical data for working temperature range).

Select



Push EProg

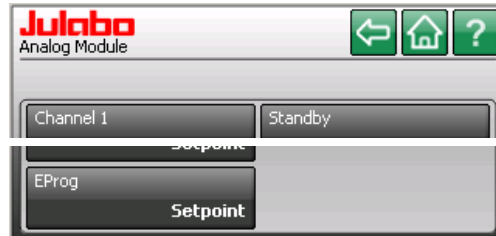

The current settings are displayed.

0.0 V equals 50.0 °C
 10.0 V equals 250 °C



Push edit





Step 1 is displayed.



Push value and select.



Push signal type and select.

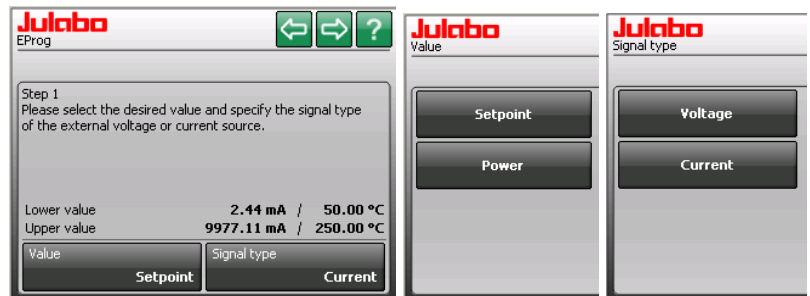

i Continue automatically to step 2

i switch window

Please observe the instructions for step 2.


Example: 0.0 mA

Set lower value

and



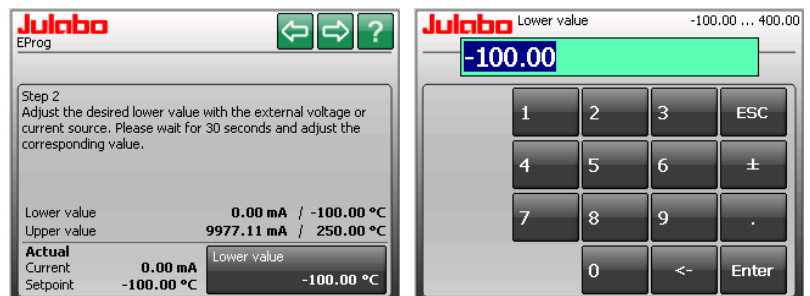

Example: -100 °C





i Continue automatically to step 3

Please observe instructions for step 3.

Example: 20.0 mA


Set upper value and .

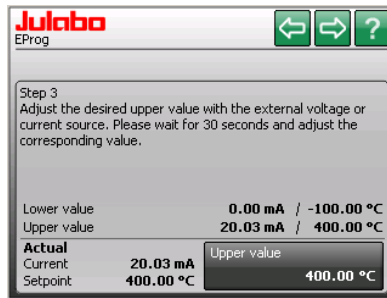 Example: 400 °C



 Continue automatically

You can check the result using a control setting.

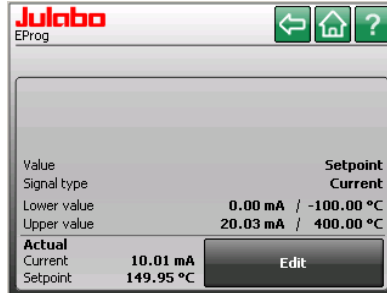
Example:
Set 10.0 mA and the unit will calculate 150.0 °C.



Standard display:




Under the tab setpoint the setting of the signal is displayed above the EProg-input.

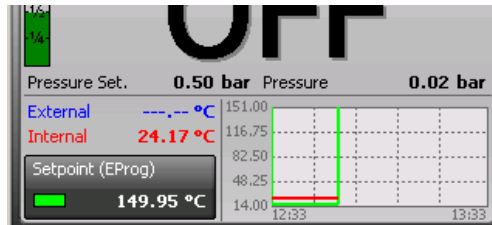



This EProg input enables the use of different voltage and current values as program parameters.

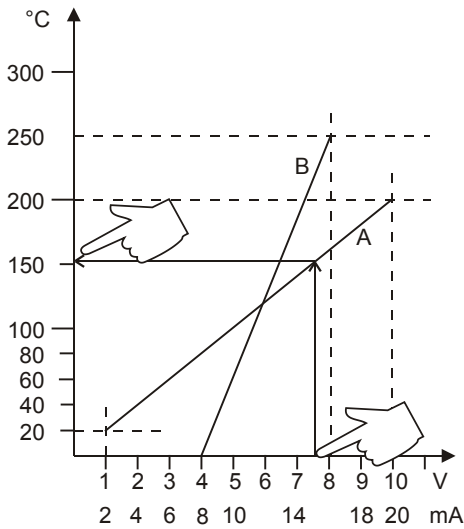

• **Setting the lower value**

1. Adjust and set the lowest desired value on the voltage or current source (Example A: 1 V).
Wait approximately 30 seconds.
2. Assign a lower temperature threshold value to this adjusted voltage/current value by pressing the appropriate keys on the digits keypad of the instrument (Example A: 20 °C) and set by pressing **Enter**.

• **Setting the upper value:**

1. Adjust and set the highest desired value on the voltage or current source (Example A: 10 V).
Wait approximately 30 seconds.
2. Assign an upper temperature threshold value to this adjusted voltage/current value by pressing the appropriate keys on the digits keypad of the instrument (Example A: 200 °C) and set by pressing **Enter**.

Example B in the diagram illustrates that the end point values are freely selectable (e.g., 8 mA and 16 mA).

Example out of diagram A:

- Adjust the voltage source for an output of 7.6 V!

The unit calculates the temperature value from the gradient of the two specified end points (7.6 V correspond to a setpoint 152.0 °C).

This value is shown in the standard display



NOTICE:

If this adjustment is not correctly performed at two different points, the setpoint setting will be incorrect.

11. "Install unit" menu

Select in the main menu.




11.1. "Fill unit" menu (refilling)

Connect the mains power and switch on the unit at the mains switch.

Following the self-test, the unit will be in the "OFF" status and emit an audible signal.

To mute the signal, press the alarm notice's red box.

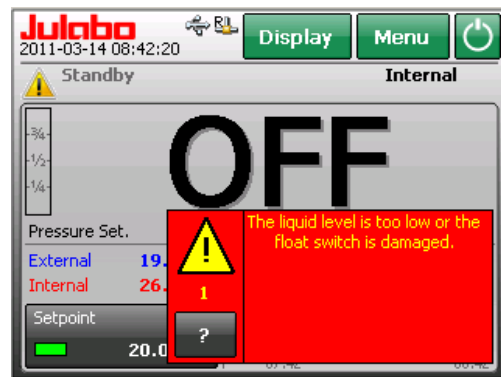

Error 1: Low-level alarm

Proper filling procedure:



The **>Fill unit<** box will appear in the help text.


Press **>Fill unit<**.




Follow the instructions on the screen.

Filling the unit




- Open the cover on the housing.
- Remove the plug.
- Slowly pour heat transfer liquid into the round opening.

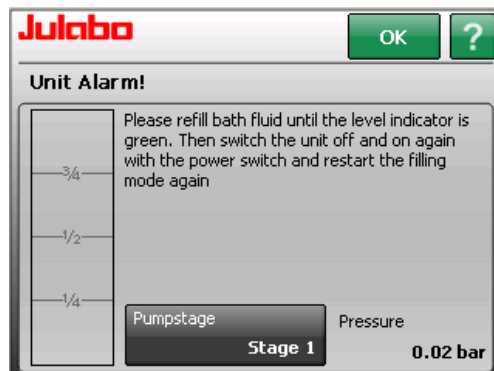

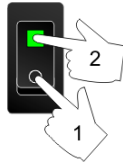

Fill in liquid up to the desired fill level.


Return to standard display by pressing 

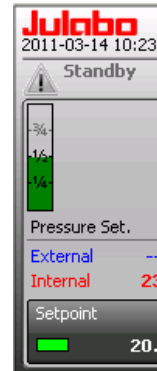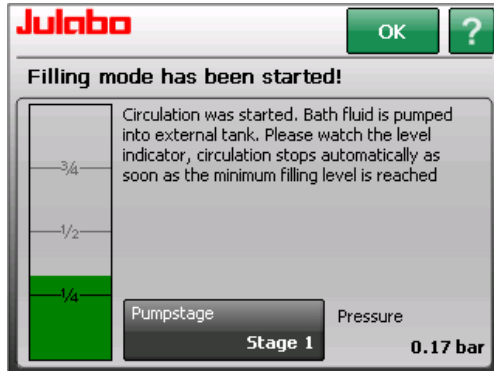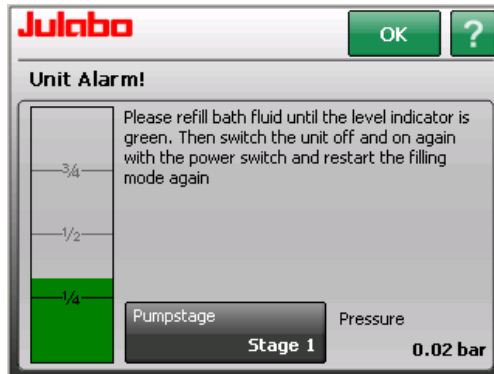

If there is too much bath fluid or if the bath fluid extends due to heating during operation, a high level warning is activated.

Ticker:

The early warning system for high level reports a critical fluid level. Please drain bath fluid.

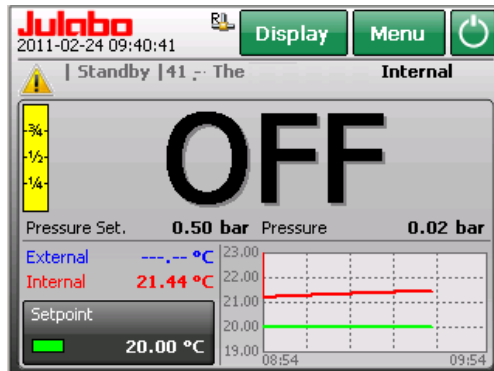

Example: Image A40



In this case use the drain (6) to discharge bath fluid.

See next chapter for description of drain (7).

11.2. "Empty the unit" menu



Caution:


Do not drain the bath fluid while it is hot or cold !
Store and dispose the used bath fluid according to the laws for environmental protection.

Preparations:

The drain nozzle and the drain screw are located at the bottom of the unit behind the ventilation grid.

Draining:


- Slide a short piece of tubing onto the drain port (7).
12 mm inner dia. tubing.
- Place a suitable container for catching the liquid under the unit.

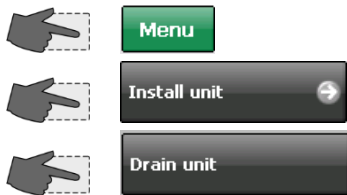

After the mechanical preparations the unit is drained menu-driven via the user interface.

The ticker in the display reports the start of the automatic draining mode.

The setpoint is adjusted to 20.00°C. As soon as a temperature of 20 °C (± 10 K) is reached the ticker text will change and prompts the draining of the unit.

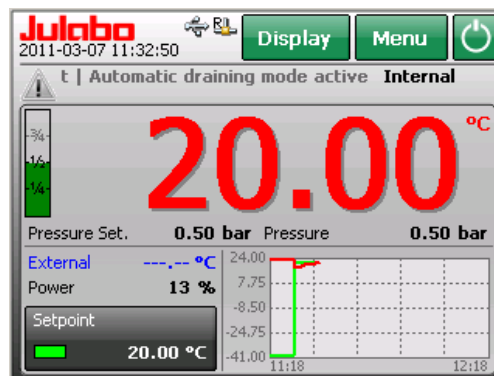

- Unscrew the drain screw (8) by some turns.

Ticker:

Automatic draining mode active. Wait until the medium temperature has reached the adjusted setpoint.

Automatic draining mode finished. You can drain the unit now.


As the liquid drains, the unit will emit first the low-level warning (warning 40) and then the low-level alarm (alarm 1, red).

"Install unit" menu

Warnings are displayed as a ticker in the status line.



Mute the audible signal by pressing the yellow symbol.

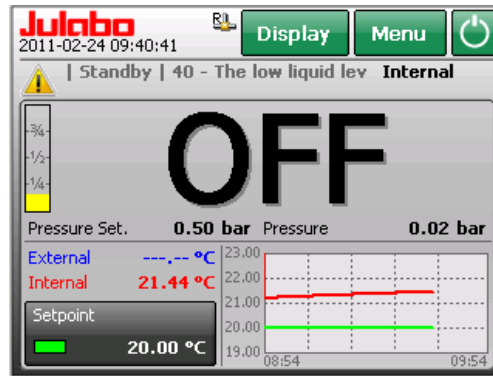

Mute the audible signal by pressing the red box.



In case of a complete exchange of the bath fluid the expansion tank must also be drained.

In this case use the drain (6) to discharge bath fluid.



11.3. "Adjust sensors" menu



Notice:

Do not alter the factory-setting for the internal sensor!

This is a closed temperature control system: only the calibration of the external sensor is sensible.


Both the internal temperature sensor and any external temperature sensor (attached to the "ext. Pt100" socket) may be calibrated.

Principle: external sensor calibration

During calibration in the external bath, a reference temperature sensor is used to determine the bath temperature in a stabilized condition.

This value is then entered under the >Adjust sensors< menu, >Calibration value< menu item.


1. Temperature system
2. External temperature sensor Pt100
3. External bath
4. Temperature measuring device with a reference temperature sensor. (Indicates the calibration value)

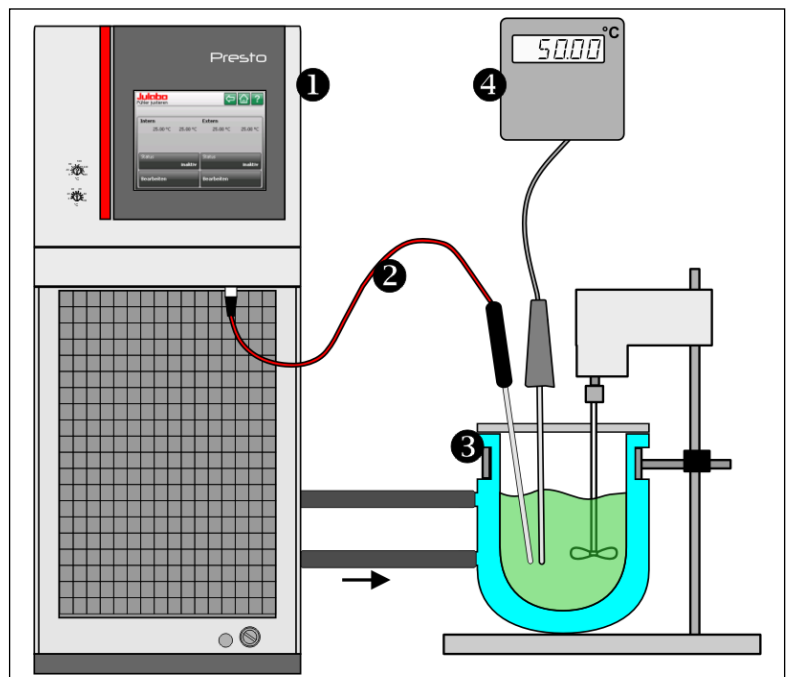

Preparations:

- ① Connect the external sensor Pt100 to the connecting socket „EXT Pt100“.
- ① Set unit to >internal control< (see page 23).

"Install unit" menu

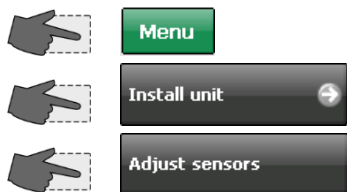

Select >Status< >Inactiv<



Select >Edit<



Select >Number of points<



Example: >3-point< calibration

i This setting determines the number of the following steps.

Follow the instructions on the screen.

(Values are examples only).

Calibration point 1

Set >Setpoint<


Wait

Set >Calibration value<

It is not possible to enter a calibration value while a button is light grey.





Example: Calibration of the **external** sensor.

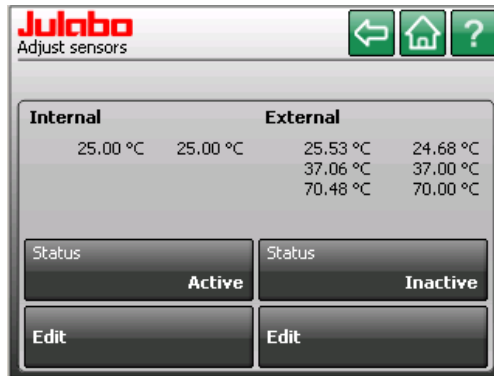


Important:

During calibration >Status< >inactive< must be activated. Switch to >activ< after calibration.


You can perform a >1-point<, >2-point<, or >3-point< calibration

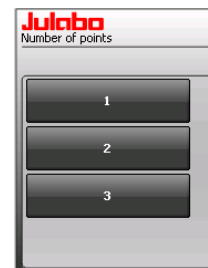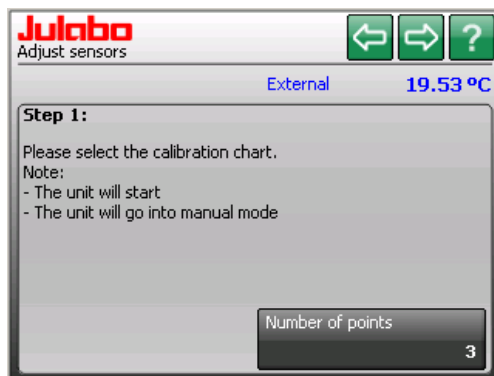


i Switch window

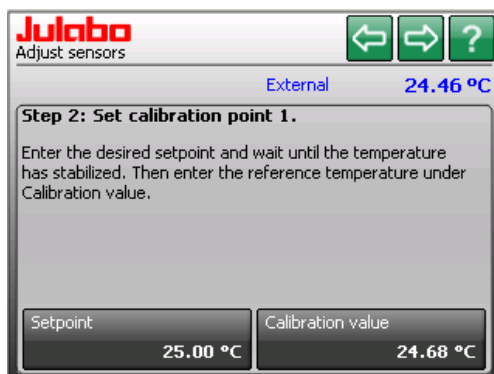

Wait

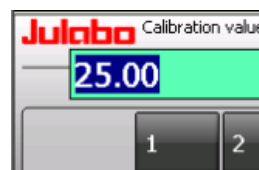

Calibration point 2


 Set >Setpoint<

Wait

 Set >Calibration value<



Calibration point 3


 Set >Setpoint<


Wait

 Set >Calibration value<




After the final value has been entered, all calibration points (three in this case) will be displayed. (Values are examples only).

 Set >Status< >active< after the calibration.

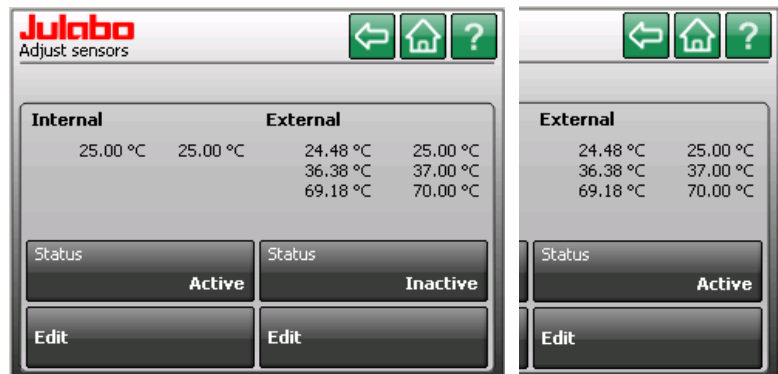


In the > **Status** < >active< the calibration curve always affects the current working temperature; also the one set via interface.

Examples:
1-point calibration

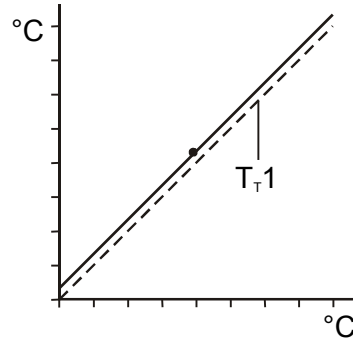

3-point calibration

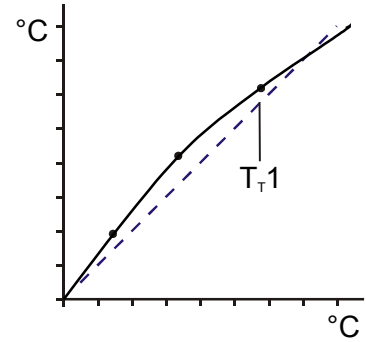

T_{T1} = Original curve

In case of a 1-point-calibration the calibration curve is moved entirely towards the original curve of the sensor.


In case if a 3-point calibration a bent curve may result. Thus the accuracy of the temperature indication can be improved in areas important to the application.

Example:

Working temperature setpoint 150 °C

The comparison points can be set at 140 °C, 150 °C and 160 °C.

11.4. "Reset unit" menu

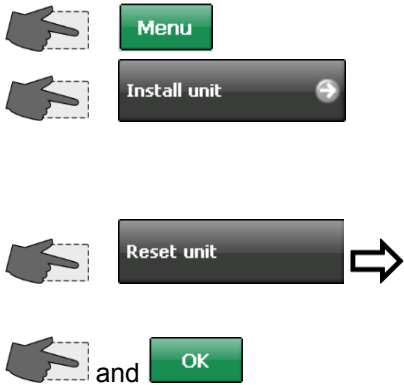

11.5. "Unit name" menu



Use the keypad to enter the name


Example: A40 and Barcode

At delivery every unit has a name which can be changed here.



Then use the mains switch to switch the unit off and switch it back on approximately 4 seconds later.

It will now be easier to identify the unit in the ethernet.

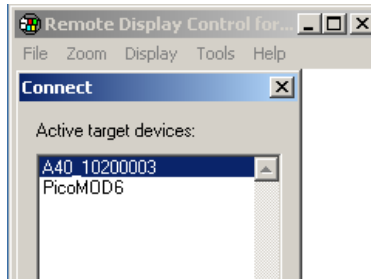

11.6. Save/load parameters

Once the optimum settings of the parameters of an application have been determined, this menu will enable you to save these on an external data carrier. It is therefore possible to specify various unit settings which can be used over and over again or can be transferred to additional units.




Important Note:

Unit data can only be exchanged between identical models.

Examples: A40 to A40 / W40 to W40



Not possible from A40 to W40

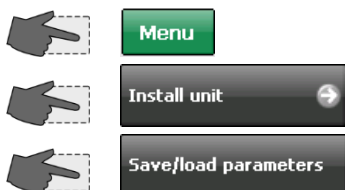

Please insert data carrier, e.g. USB stick.



Save parameters

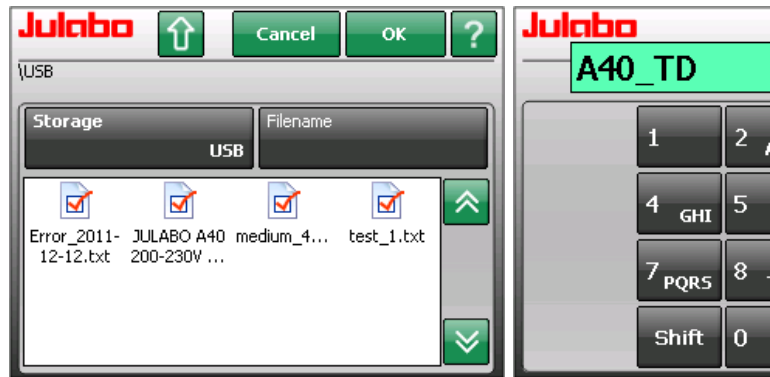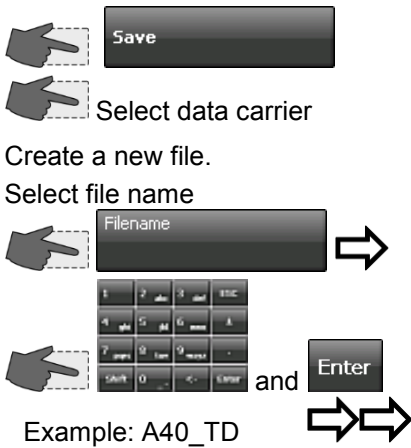



Storage parameters




ⓘ The unit data are saved on an external data carrier.

Load parameters

Please insert data carrier., e.g. USB stick.

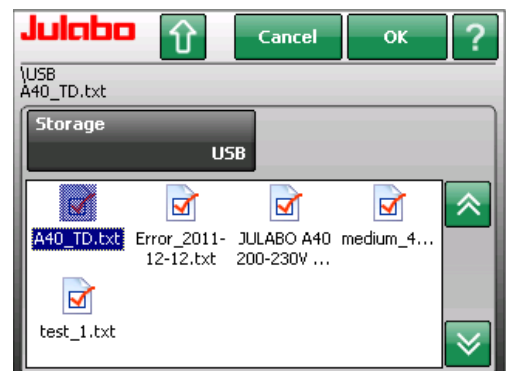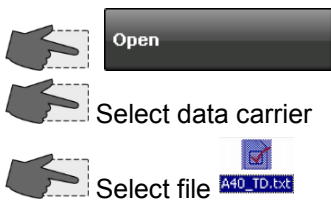

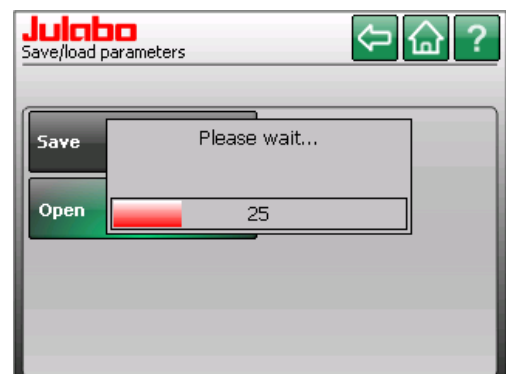

Load parameters.




ⓘ The unit data are loaded from the external data carrier.


11.7. Configure unit


The unit can be configured through the CAN Bus interface using a TFT display module (with USB stick, for example). Configuration files must be approved by JULABO.

 Button to go back one step 

Please insert data carrier., e.g. USB stick.

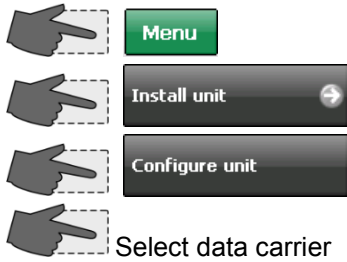


 1. / 2. Double click to select and open the configuration file.

 3. Select desired file and start the configuration with double click or OK.



Example:

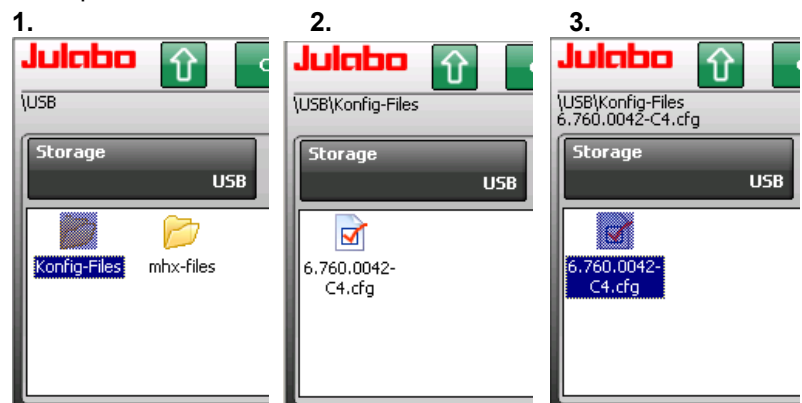


The configuration data will be sent in the first step and examined in the second step.


Attention:

When examining the configuration data the language may change!

See **Note** below.

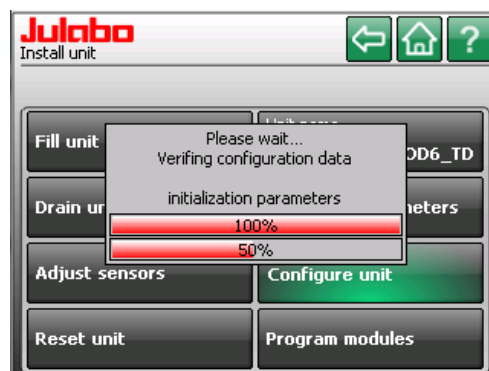

Successful configuration is confirmed at the end.

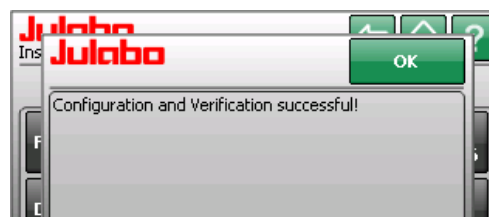




Note:

The language setting (German or English) in a configuration file is based primarily on the unit's mains voltage or mains frequency. This is defined by JULABO, since each unit has only one configuration file.

If the language is switched during examination of the configuration data, one of the following two displays will appear:





Return to desired language setting.

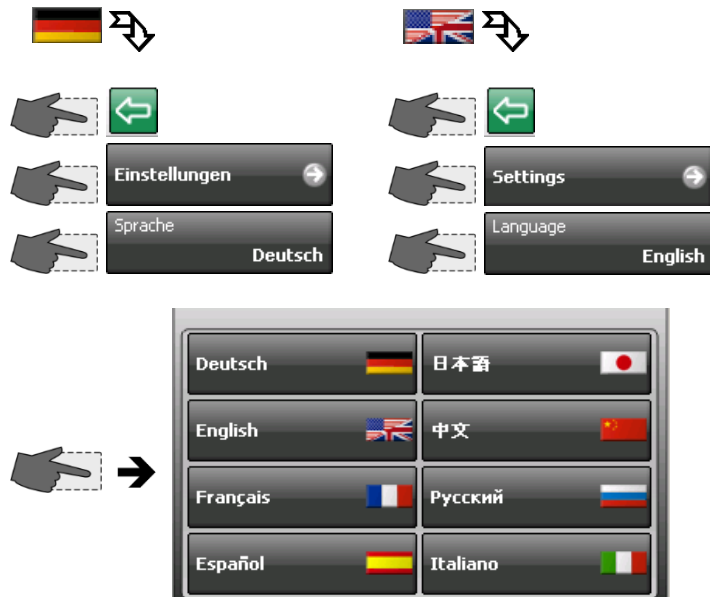


11.8. Firmware update

The unit's electronic modules can be programmed through the CAN Bus interface using a TFT display module (with USB stick, for example). Removal not required.

As a result, updates are completed quickly and at low cost.

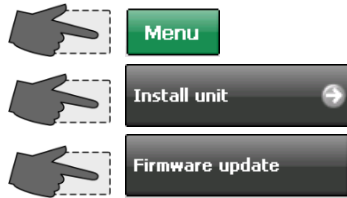

- Load the zip-file on an empty data carrier and extract.
- Insert the data carrier into the appropriate slot, such as a USB port.
- After pressing the key, the unit searches for the file >Update< and executes the update.




12. Error messages, fault causes, remedies


Error messages are divided into two groups, alarms and warnings. For quick differentiation both are shown in different colors on the TFT display. Possible fault causes as well as repair measures are listed.


ALARM display

Error messages are displayed in a red box.


Example: Error 14

Touch the red box to
 mute the alarm.

Press  button for help text.
 The module and the configuration are listed.

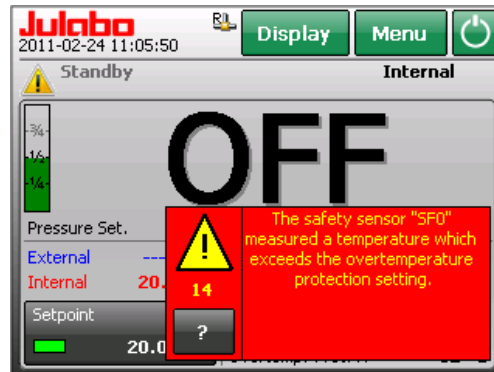

The unit switches to status „Standby“. Heater, refrigeration unit and circulation pump are switched off.

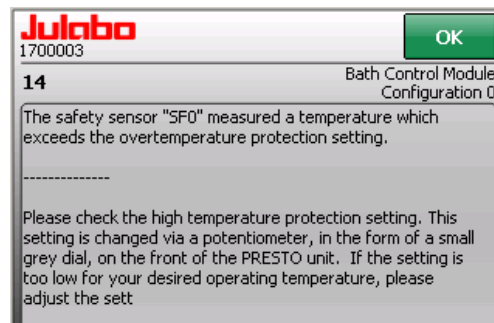


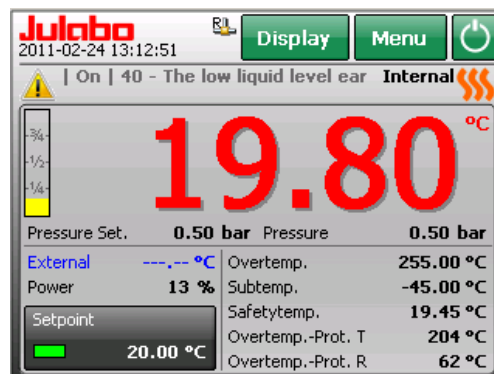
WARNING display

Warnings are displayed as a ticker in the status line.




Example: Warning 40

Touch the icon to mute the signal.




Help is always accessible through

the icons  or .



Touch the icon and a list of errors will be displayed. 



Displays during errors



ALARM Red > 


WARNING Yellow > 



Code	From	Until		
	2011-02-24 09:33:55	2011-02-24 09:46:31		
	2011-02-23 15:33:39	-		
	2011-02-23 14:31:44	2011-02-23 15:33:39		
	2011-02-23 13:02:31	-		
	2011-02-23 11:10:01	-		


Date and time when the error appeared are stored and displayed. If possible, this data will also be stored during removal of the error. Example code  

Use the   keys to view the list.

Use the  key to exit the list. The yellow Attention icon "

is reset to ".

Press the  button for help text. 

Press  to delete an error message from the list. The 10 most recent events are shown.

Code	From	Until		
	2011-02-24 09:33:55			
	2011-02-23 15:33:39			
	2011-02-23 14:31:44	2011-02-23 15:33:39		
	2011-02-23 13:02:31			
	2011-02-23 11:10:01			

Julabo
1715106
Bath Control Module
Configuration 15

40

The low liquid level early warning system reports the liquid level is critically low.

Please add bath liquid until the liquid level indicator turns green.

Code	From	Until		
	2011-02-24 09:33:55	2011-02-24 09:46:31		
	2011-02-23 15:33:39			
	2011-02-23 14:31:44	2011-02-23 15:33:39		
	2011-02-23 13:02:31			
	2011-02-23 11:10:01			

Julabo
1700003
Bath Control Module
Configuration 0

14

The safety sensor "SFO" measured a temperature which exceeds the overtemperature protection setting.

Please check the high temperature protection setting. This setting is changed via a potentiometer, in the form of a small grey dial, on the front of the PRESTO unit. If the setting is too low for your desired operating temperature, please adjust the sett

13. Remote control

13.1. Setup for remote control



Adjust the interface in the „Connect unit Menu“ under menu item „Remote control“ (refer to page 52).

The mostly one-time adjustment of the interface parameters is carried out at the unit in its "Digital interfaces" menu (refer to page 55).

Factory settings: RS232

BAUDRATE 4800 Baud

PARITY even parity

HANDSHAKE Protocol RTS/CTS
(hardware handshake)
Data bits 7
Stop bit 1



The interface parameters are stored in the memory even after the unit is turned off.

13.2. Communication with a PC or a superordinated data system



If the unit is put into remote control mode, the TFT-DISPLAY will read "R" = REMOTE.

In general, the computer (master) sends commands to the instrument (slave). The instrument sends data (including error messages) only when the computer sends a query.

In remote control mode, the start command and all values to be set must be reset by the PC via the interface in case of a power interruption.

AUTOSTART is not possible.

A transfer sequence consists of:

- command
 - space (↔; Hex: 20)
 - parameter (decimal separation with a period)
 - end of file (↵; Hex: 0D)
- The response (data string) after an **in** command is always followed by a line feed (LF, Hex: 0A).

The commands are divided into **in** or **out** commands.

in commands: retrieve parameters

out commands: set parameters



The **out** commands are valid only in remote control mode.

Command to set the working temperature

>Setpoint1< to 55.5 °C **out_sp_00 ↔ 55.5↵**

Command to retrieve the working temperature

>Setpoint1< **in_sp_00↵**

Response from the temperature system: **55.5↵ LF**

13.3. List of commands

This list of commands includes all available commands for PRESTO™ Axx and PRESTO™ Wxx.

Some commands may be used only in limited situations and are shown with an appropriate note.

Example:

[not on A30]

13.3.1. in commands

in commands: Asking for parameters or temperature values to be displayed.

Command	Parameter	Response of instrument
version	none	Number of software version (V X.xx).
status	none	Status message, error message).
in_pv_00	none	Actual bath temperature.
in_pv_01	none	Heating power being used (%).
in_pv_02	none	Temperature value registered by the external Pt100 sensor.
in_pv_03	none	Temperature value registered by the safety sensor >TANK<.
in_pv_04	none	Over-temperature safety device setting.
in_pv_05	none	Pump pressure in bar.
in_pv_06	none	Pump pressure of the external sensor socket.
in_pv_07	none	Flow value of the external sensor socket.
in_pv_08	none	Pressure 2 [not on PRESTO™]
in_pv_09	none	Cooling water flow.
in_pv_12	none	Temperature at external sensor 2.
in_sp_00	none	Working temperature (setpoint 1).
in_sp_01	none	Working temperature (setpoint 2).
in_sp_02	none	Working temperature (setpoint 3).
in_sp_03	none	Upper temperature limit.
in_sp_04	none	Lower temperature limit.
in_sp_05	none	Setpoint temperature of the external programmer (socket REG+E-PROG).
in_sp_06	none	Watchdog set point.
in_sp_07	none	Pump pressure stage. Selected pump stage.

[not on A30]

Command	Parameter	Response of instrument
in_sp_08	kein	Flow rate setpoint. [not on A30]
in_sp_09	none	Value from pump pressure setpoint. [not on A30]
in_sp_10	none	Selected variable setting via the serial interface.
in_sp_11	none	Temperature indication in °C or °F.
in_sp_12	none	Pump pressure indication in bar or psi.
in_sp_13	none	Flow indication in l/min or gpm.
in_sp_14	none	Pressure warning limit, upper.
in_sp_15	none	Pressure warning limit, lower.
in_sp_16	none	Pressure alarm limit (5 s).
in_sp_17	none	Pressure alarm limit (1 s).
in_sp_18	none	Flow rate warning limit, upper.
in_sp_19	none	Flow rate warning limit, lower.
in_sp_25	none	Maximum temperature gradient, heating.
in_sp_26	none	Maximum temperature gradient, cooling.
In_hil_00	none	Max. cooling power (%).
In_hil_01	none	Max. heating power (%).
in_mode_01	none	Setpoint for control set to: 0 = Setpoint1 1 = Setpoint2 2 = Setpoint3
In_mode_02	none	Selftuning type: 0 = Selftuning "off" 1 = Selftuning "once" 2 = Selftuning "always"
in_mode_03	none	Type of external programmer input: 0 = Voltage 0 V to 10 V 1 = Current 0 mA to 20 mA
in_mode_04	none	Internal/external temperature control: 0 = Temperature control with internal sensor. 1 = Temperature control with external Pt100 sensor.
in_mode_05	none	Unit in stop/start condition: 0 = stop 1 = start
in_mode_08	none	Adjusted control dynamics 0 = aperiodic 1 = standard
in_mode_09	none	Selected pump control 0 = Stage control 1 = Pressure control 2 = Flow rate control 3 = Flow rate control (Bypass)

Remote control

Command	Parameter	Response of instrument
in_par_00	none	Difference between the working sensor and the safety sensor
in_par_01	none	Te - Time constant of the external bath.
in_par_02	none	Si - Internal slope.
in_par_03	none	Ti - Time constant of the internal bath.
in_par_04	none	Control parameter CoSpeed of the external controller 0 ... 5.0.
in_par_06	none	Xp control parameter of the internal controller.
in_par_07	none	Tn control parameter of the internal controller.
in_par_08	none	Tv control parameter of the internal controller.
in_par_09	none	Xp control parameter of the cascade controller.
in_par_10	none	Proportional share of the cascade controller.
in_par_11	none	Tn control parameter of the cascade controller.
in_par_12	none	Tv control parameter of the cascade controller.
in_par_13	none	Adjusted maximum internal temperature of the cascade controller.
in_par_14	none	Adjusted minimum internal temperature of the cascade controller.
in_par_15	none	Band limit (upper); Upper band limit.
in_par_16	none	Band limit (lower); Lower band limit.

13.3.2. out commands

out commands: Setting parameters or temperature values.

Command	Parameter	Response of instrument
out_mode_01	0	Use working temperature (Setpoint 1).
out_mode_01	1	Use working temperature (Setpoint 2).
out_mode_01	2	Use working temperature (Setpoint 3).
out_mode_02	0	Selftuning "off". Temperature control using the stored parameters.
out_mode_02	1	Selftuning "once" Single selftuning of the controlled system after the next start.
out_mode_02	2	Selftuning "always" Continual selftuning of the controlled system whenever a new setpoint is to be reached.
out_mode_03	0	Set external programmer input to voltage. Voltage 0 V ... 10 V
out_mode_03	1	Set external programmer input to current. Current 0 mA ... 20 mA
out_mode_04	0	Temperature control of internal bath.
out_mode_04	1	External control with Pt100 sensor.
out_mode_05	0	Stop the unit = R -OFF-.
out_mode_05	1	Start the unit.
out_mode_08	0	Set the control dynamics – aperiodic ¹
out_mode_08	1	Set the control dynamics - standard ¹
out_mode_09	0	Set pump to stage control.
out_mode_09	1	Set pump to pressure control.
out_mode_09	2	Set pump to flow rate control.
out_mode_09	3	Set pump to flow rate via the external bypass.
out_sp_00	xxx.x	Set working temperature. (Setpoint 1).
out_sp_01	xxx.xx	Set working temperature. (Setpoint 2).
out_sp_02	xxx.xx	Set working temperature. (Setpoint 3).
out_sp_03	xxx.x	Set upper temperature limit.
out_sp_04	xxx.x	Set lower temperature limit.
out_sp_06	xxx.xx	Set watchdog set point.

¹ The dynamics cannot be changed with the maximum temperature gradient, heating/cooling active.

Command	Parameter	Response of instrument
out_sp_07	x	Set the pump pressure stage. (1 ... 4). [not on A30]
out_sp_08	xxx.xx	Set flow rate setpoint. [not on A30]
out_sp_09	xxx.xx	Set pump pressure setpoint. [not on A30]
out_sp_10	xxx	Set variable via the serial interface -100 ... 100 [%]
out_sp_11	0	Temperature display in °C.
out_sp_11	1	Temperature display in °F.
out_sp_12	0	Pressure display in bar .
out_sp_12	1	Pressure display in psi .
out_sp_13	0	Flow rate display in l/min .
out_sp_13	1	Flow rate display in gpm .
out_sp_14	xxx.xx	Set pressure warning limit, upper.
out_sp_15	xxx.xx	Set pressure warning limit, lower.
out_sp_16	xxx.xx	Set pressure alarm limit (5 s).
out_sp_17	xxx.xx	Set pressure alarm limit (1 s).
out_sp_18	xxx.xx	Set flow rate warning limit, upper.
out_sp_19	xxx.xx	Set flow rate warning limit, lower.
out_sp_25	xxx.xx	adjust maximum temperature gradient, heating ²
	-	deactivate maximum temperature gradient, heating ²
out_sp_26	xxx.xx	adjust maximum temperature gradient, cooling ²
	-	deactivate maximum temperature gradient, cooling ²
out_hil_00	-xxx	Set the desired maximum cooling power (0 % to 100 %). Note: Enter the value with a preceding negative sign!
out_hil_01	xxx	Set the desired maximum heating power (10 % to 100 %).
out_par_04	xxx	Control parameter CoSpeed of the external controller 0 ... 5.0.
out_par_06	xxx	Xp control parameter of the internal controller.
out_par_07	xxx	Tn control parameter of the internal controller.
out_par_08	xxx	Tv control parameter of the internal controller.
out_par_09	xxx	Xp control parameter of the cascade controller.

² If the maximum temperature gradient, heating/cooling, values change, the dynamics of the internal control is automatically adjusted to "Standard"

Command	Parameter	Response of instrument
out_par_10	xxx	Proportional portion of the cascade controller.
out_par_11	xxx	Tn control parameter of the cascade controller.
out_par_12	xxx	Tv control parameter of the cascade controller.
out_par_13	xxx	Maximum internal temperature of the cascade controller.
out_par_14	xxx	Minimum internal temperature of the cascade controller.
out_par_15	xxx	Upper band limit 0 ... 200 K.
out_par_16	xxx	Lower band limit 0 ... 200 K.

13.4. Status messages

Status messages	Description
00 MANUAL STOP	PRESTO™ in "OFF" state.
01 MANUAL START	PRESTO™ in normal control mode.
02 REMOTE STOP	PRESTO™ in "Remote OFF" state.
03 REMOTE START	PRESTO™ in remote control mode.

13.4.1. Status messages as reply to sent commands

Messages	Description
-08 INVALID COMMAND	The unit did not recognize the most recently received command.
-09 COMMAND NOT ALLOWED IN CURRENT OPERATING MODE	The most recently received command is not permitted in the current operating mode (example: setpoint specification while the unit is working in manual mode).
-10 VALUE TOO SMALL	Entered value too small.
-11 VALUE TOO LARGE	Entered value too large.
-13 VALUE EXCEEDS TEMPERATURE LIMITS	Value lies outside the adjusted range for the high and low temperature warning limits. But the value is stored.



Note:
In addition to status messages, error messages are also transferred (See error messages starting on Page 108).

14. Communication via Modbus TCP/IP

14.1. Datatypes

14.1.1. Used Datatypes

The PRESTO™-Modbus protocol uses the following datatypes:

Datatype	Description	Number of used registers
short	signed value with 16 bits	1
ushort	unsigned value with 16 bits	1
int	signed value with 32 bits	2
uint	unsigned value with 32 bits	2
float	floating point value with 32 bits	2

Table 1: Datatypes

The data types of the several values are listed in the parameter description tables (**Table 3 Table 4**).

14.1.2. Data Encoding

MODBUS uses 16 bit registers for data transaction. Therefore, data values, which have more than 16 bit (float, int, uint) need to be divided into two (or more) contiguous registers. According to the MODBUS specification, these data values are encoded with the HIGH-WORD in the first and the LOW-WORD in the second register. It is absolutely required that the complete bus system uses the same format so that all data is decoded correctly. Some masters use the so called INTEL format (LOW-WORD first, HIGH-WORD second).

Therefore you can change the data encoding between INTEL format and MODBUS format by using holding-register 93.

Floats are encoded in IEEE754 format (1Bit Sign, 8Bits Exponent, 23Bits Mantissa).

14.2. Error Handling

If the unit detects an illegal data frame, it responses with an exception response. The following exception responses are supported by the unit.

Code	Name	Description
01	ILLEGAL FUNCTION	The function code received is not supported by the unit. Attempt to change any parameter and the unit is not in remote control.
02	ILLEGAL DATA ADDRESS	The data address received in the query is not an allowable address for the unit (see register tables below). The combination of data address and data length is not allowed for the unit. (e.g. only the first or only the second register on an multi-register value is set). The register cannot be changed.
03	ILLEGAL DATA VALUE	The adjusted value is not in the allowed range for the unit.

Table 2: Exception-Codes

14.3. Holding-Registers

14.3.1. Function-Codes

Name	Code (dec.)	Code (hex.)	Description
Read Holding Registers	03	03	Read multiple Holding Registers from the PRESTO™
Write Single Registers	06	06	Write a single holding register to the PRESTO™
Write Multiple Registers	16	10	Write multiple contiguous holding registers (1-123) to the PRESTO™. Use this function if you want to change values which have a datalength greater than 1 register (float-values).
Read/Write Multiple registers	23	17	Combination of one read operation and one write operation in a single MODBUS transaction. The write operation is performed before the read.

14.3.2. Register table

Register-address	Protocol Address	Datatype	Description	Adjustable range
	0	ushort	Start/Stop the unit	0: Unit is in OFF-Mode 1: Unit is started
	1	ushort	Acting variable input	0: Controller 1: Digital 2: EPROG
	2 – 3	float	Working temperature (Setpoint)	Setpoint min. – Setpoint max.
	4	short	Heating/Cooling power via MODBUS	-100 ... 100
Control parameters				
	10	ushort	Temperature control of internal bath/external PT100 sensor	0: Temperature control of internal bath 1: External control with Pt100 sensor
	11	ushort	Selftuning function	0: No selftuning 1: Single selftuning of the controlled system after the next start. 2: Continual selftuning of the controlled system whenever a new setpoint is to be reached.
	12 – 13	float	Xp control parameter of the internal controller	0.1 ... 99.9 1/K
	14	ushort	Tn control parameter of the internal controller	3 ... 9999 s
	15	ushort	Tv control parameter of the internal controller	0 ... 999 s

Register-address	Protocol Address	Datatype	Description	Adjustable range
	16	ushort	control dynamics ³	0: Aperiodic 1: Standard
	17 – 18	float	Xp control parameter of the cascade controller	0.1 ... 99.9 1/K
	19	ushort	Tn control parameter of the cascade controller	3 ... 9999 s
	20	ushort	Tv control parameter of the cascade controller	0 ... 999 s
	21 – 22	float	XpU control parameter of the cascade controller	0.1 ... 99.9 1/K
	23 – 24	float	CoSpeed for external control	0.0 ... 5.0
Controller limits				
	40	short	maximum cooling power	-100 ... 0
	41	short	maximum heating power	0 ... 100
	42 – 43	float	Min. internal temperature of the cascade controller	
	44 – 45	float	Max. internal temperature of the cascade controller.	
	46	short	Lower band limit	0 ... 200 K
	47	short	Upper band limit	0 ... 200 K
Pump settings				
	50	ushort	control type pressure control / stage control	0: Stage control 1: Pressure control 2: Flow control 3: Flow control (Bypass)
	51	ushort	Pressure control of internal/external pressure sensor	0: Pressure control of internal sensor 1: Pressure control of external sensor
	52	ushort	Pumpstage	1 – Pumpstage max. (74)
	53 – 54	float	Working pressure (Pressure setpoint)	0 ... Pressure setpoint max (75)
	55 – 56	float	Working flow rate (Flow rate setpoint)	
Temperature limits				
	60 – 61	float	Low temperature warning limit (SubTemp)	
	62 – 63	float	High temperature warning limit (Overtemp)	
	64 – 65	float	float maximum temperature gradient, cooling ⁴	-100 ... -0.1 - infinite (0xFF800000) for deactivation
	66 – 67	float	maximum temperature gradient, heating ⁴	0.1 ... 100 + infinite (0x7F800000) for deactivation

³ The dynamics cannot be changed with the maximum temperature gradient, heating/cooling active.

⁴ If the maximum temperature gradient, heating/cooling, values change, the dynamics of the internal control is automatically adjusted to "Standard"

Register-address	Protocol Address	Datatype	Description	Adjustable range	
Setpoint limits					
	70 – 71	float	minimum adjustable temperature setpoint		
	72 – 73	float	maximum adjustable temperature setpoint		
	74	ushort	maximum adjustable pump stage	1 – 4	
	75 – 76	float	maximum adjustable pressure setpoint		
Pressure limits					
	80 – 81	float	lower warning limit for pump pressure	0 ... upper warning limit	
	82 – 83	float	upper warning limit for pump pressure	lower warning ... Pressure limit	
	84 – 85	float	Pressure limit	upper warning limit ... Pressure peak limit	
	86 – 87	float	Pressure peak limit	Pressure limit – sensor measurement range	
Units					
	90	ushort	Temperature unit	0: °C 1: °F	
	91	ushort	Pressure unit	0: bar 1: psi	
	92	ushort	Flow unit	0: l/min 0: gpm	
	93	ushort	Modbus-Format ⁵	0: BigEndian, NoSwap 1: LittleEndian, NoSwap 2: BigEndian, Swap 3: LittleEndian, Swap	
DateTime					
	100	ushort	Year		
	101	ushort	Month		
	102	ushort	Day		
	103	ushort	Hour		
	104	ushort	Minute		
	105	ushort	Second		

Table 3: Holding registers

⁵ Defines the data encoding format of all registers (see chapter 14.1.2) EXCEPT this. THIS REGISTER IS ALWAYS IN MODBUS FORMAT!!!

14.4. Input-Registers

Input-Registers can be read by the master.

14.4.1. Function-Codes

Name	Code (dec.)	Code (hex.)	
Read Input Registers	04	04	

14.4.2. Register-Table

Register-address	Protocol Address	Datatype	Description	Range / Meaning	
30001-30002	0 – 1	uint	Firmware version	Byte1: Major Byte2: Minor Byte3: Build Byte4: Revision	
30003	2	ushort	Unit type		
30004-30005	3 – 4	uint	Unit barcode		
30006	5	short	Unit remote control status	0: ManualControl 1: RS232 2: USB 3: Ethernet 4: Modbus 5: WirelessTEMP	
30007	6	short	Unit Alarmcode	Error messages see page 108	
	7	short	Unit Warncode	Error messages see page 108	
Act. values					
30011-30012	10 – 11	float	Current bath temperature		
30013-30014	12 – 13	float	Temperature value registered by the external Pt100 sensor		
30015	14	short	Heating/Cooling power being used	-100 ... 100	
30016-30017	15 – 16	float	Temperature value registered by the safety sensor TANK		
30018-30019	17 – 18	float	Temperature value registered by the safety sensor RESERVOIR		
30020-30021	19 – 20	float	Excess temperature protection setpoint TANK		
30022-30023	21 – 22	float	Excess temperature protection setpoint RESERVOIR		
30024-30025	23 – 24	float	Pressure value registered by the internal pressure sensor		
30026-30027	25 – 26	float	Pressure value registered by the external pressure sensor		

Register-address	Protocol Address	Datatype	Description	Range / Meaning	
30028-20029	27 – 28	float	Flow value registered by the external pressure sensor		
30030-30031	29 – 30	float	Pressure2		[not on PRESTO™]
30032-30033	31 – 32	float	Cooling water flow rate		[not on PRESTO™]
30038-20039	37 – 38	float	External Temperature 2		
30051-30052	50-51	float	Si - Internal slope		
30053	52	ushort	Ti - Time constant of the internal bath		
30054	53	ushort	Te - Time constant of the external bath		

Table 4: Input registers

15. Error messages


In the following all error messages for PRESTO™ units, which may occur, are listed. Due to the varying performance classes of the units the number of displayed error messages differs. 1-stage units do not display error messages which affect only errors of stage 2.

For better orientation the tables are colored in correspondance with the error messages on the TFT display.

ALARM display


Error messages are displayed in a red box.


Press  for help text.

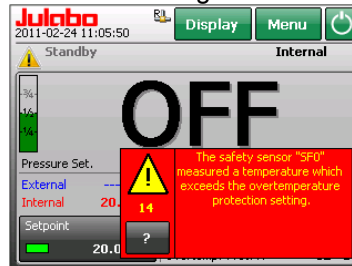

WARNING display

Warnings are displayed as a ticker

 in the status line.

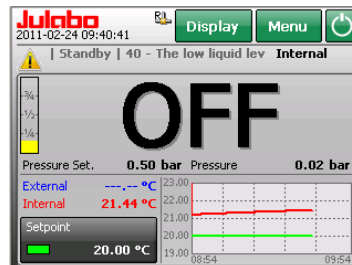

Legend of the tables:

Alarm-Code	Cause	Diagnosis / Remedy
E01		
Exx Code / No.	Abbreviations used:	
	SF	Safety sensor (SF0, SF1, ...)
	SF0_0	Safety sensor 0 in configuration 0
	SF0_1	Safety sensor 0 in configuration 1 etc.
	CAN	CAN-Bus (Internal bus system)
E03	Warnings with high priority	
E2101	Warnings with low priority	

15.1. Alarm messages

Alarm-Code	Cause	Diagnosis / Remedy
E01	Fluid level is too low.	The unit is operating with too less or without temperature control liquid. Please refill the temperature control liquid. Then turn off the unit at the power switch, wait 4 seconds, and turn the unit back on.
E05	The line to an internal temperature sensor is interrupted.	If this error continues to occur, please contact JULABO Service.
E06	Local overheating at heater.	(1) The viscosity of the liquid may not exceed the maximum permitted value at any working temperature. (2) The medium has not been completely purged. (3) There is too less recirculation.
E14	The temperature is above the high temperature cut-off temperature setting.	Please check the high temperature cut-off setting and increase the setting if necessary. WARNING: When adjusting the safety temperature, please note the operating limits (combustion point) of the temperature control liquid used. Ask the manufacturer of the temperature control liquid for information.
E15	Short circuit or interrupt in external control probe.	The unit is configured for external control but the line to the external control probe (EXT Pt100) is short circuit or interrupted. Check the electrical connection to the external control probe.
E33	The line to an internal temperature sensor is short-circuited or interrupted.	If this error continues to occur, please contact JULABO Service.
E38	Error on the external Pt100 probe with a setpoint set	Setpoint on external Pt100 is set, but there is no signal. Please check whether an external Pt100 probe is connected, or adjust the setpoint.
E60	FRAM write/read error	Turn off the unit at the power switch, wait 4 seconds, and turn the unit back on.

Alarm-Code	Cause	Diagnosis / Remedy
E61	CAN bus error.	The data communication between the TFT and the refrigeration module is permanently monitored. If communication cannot be established (e.g. by a defective connection cable), the error message „E 61“ is generated. By pressing the „OK“ key, the alarm is acknowledged. The device continues operating purely as heating circulator until the next interruption of the power supply (power-off). When the fault has been repaired, the TFT controls the refrigeration module according to the settings in the menu after the next power-on.
E62	CAN bus error.	Turn off the unit at the power switch, wait 4 seconds, and turn the unit back on.
E63	Error in the electronics.	Turn off the unit at the power switch, wait 4 seconds, and turn the unit back on.
E67	Error in module configurations	If this error continues to occur, please contact JULABO Service
E102	The line to an internal temperature sensor is interrupted.	If this error continues to occur, please contact JULABO Service.
E104	Error in internal temperature measurement circuit	If this error continues to occur, please contact JULABO Service.
E105	The line to an internal temperature sensor is short-circuited.	If this error continues to occur, please contact JULABO Service.
E106	Error in internal temperature measurement circuit.	If this error continues to occur, please contact JULABO Service.
E107	Error in internal temperature measurement circuit.	If this error continues to occur, please contact JULABO Service.
E108	The relay lock of the safety mechanism is still active.	The unit was turned back on too quickly to reset the relay lock of the safety mechanism. Turn off the unit at the power switch, wait 4 seconds, and turn the unit back on.
E110	The line to an internal temperature sensor is interrupted.	If this error continues to occur, please contact JULABO Service.
E112	Error in internal temperature measurement circuit.	If this error continues to occur, please contact JULABO Service.
E113	The line to an internal temperature sensor is short-circuited.	If this error continues to occur, please contact JULABO Service.
E114	Error in internal temperature measurement circuit.	If this error continues to occur, please contact JULABO Service.
E115	Error in internal temperature measurement circuit.	If this error continues to occur, please contact JULABO Service.

Alarm-Code	Cause	Diagnosis / Remedy
E116	The relay lock of the safety mechanism is still active.	The unit was turned back on too quickly to reset the relay lock of the safety mechanism. Turn off the unit at the power switch, wait 4 seconds, and turn the unit back on.
E117	Local overheating at heater.	(1) The viscosity of the liquid may not exceed the maximum permitted value at any working temperature. (2) The medium has not been completely purged. (3) There is too less recirculation.
E118	Error in internal temperature measurement circuit.	If this error continues to occur, please contact JULABO Service.
E119	Line break in external temperature probe 2.	Check the electrical connection to external temperature probe 2 (EXT Pt100 2).
E120	Short circuit in external temperature probe 2.	Check the electrical connection to external temperature probe 2 (EXT Pt100 2).
E201	Error in pump pressure measurement.	If this error continues to occur, please contact JULABO Service.
E201	Error in cooling water pressure measurement.	If this error continues to occur, please contact JULABO Service.
E204	Error in total current measurement.	If this error continues to occur, please contact JULABO Service.
E204	Error in current measurement in heater circuit.	If this error continues to occur, please contact JULABO Service.
E205	Error in current measurement for compressor stage 1.	If this error continues to occur, please contact JULABO Service.
E206	Error in current measurement for compressor stage 2.	If this error continues to occur, please contact JULABO Service.
E207	Error in current measurement in pump circuit.	If this error continues to occur, please contact JULABO Service.
E208	Error in main power voltage measurement.	If this error continues to occur, please contact JULABO Service.
E301	The pressure in the external temperature control circuit has been higher than the peak limit entered for 1 second.	Correct the pressure setpoint downwards, or set the peak pressure limit upwards (if reasonable from a safety standpoint).
E302	The pressure in the external temperature control circuit has been higher than the limit entered for 5 seconds.	Correct the pressure setpoint downwards, or adjust the pressure limit upwards (if reasonable from a safety standpoint).
E303	Fuse SI2 or SI3 on the power module is defective.	The power module or the fuse must be replaced.
E304	Main power voltage is detected even though the unit is in standby mode.	If this error continues to occur, please contact JULABO Service.
E401	Evaporator outlet temperature probe is defective.	Evaporator outlet temperature probe is short-circuited.
E402	Evaporator outlet temperature probe is defective.	Line break to evaporator outlet temperature probe.

Alarm-Code	Cause	Diagnosis / Remedy
E403	Compressor outlet temperature probe is defective.	Compressor outlet temperature probe is short-circuited.
E404	Compressor outlet temperature probe is defective.	Line break to compressor outlet temperature probe.
E405	Compressor inlet temperature probe is defective.	Compressor inlet temperature probe is short-circuited.
E406	Compressor inlet temperature probe is defective.	Line break to compressor inlet temperature probe.
E407	Air intake temperature probe is defective	Air intake temperature probe is short-circuited.
E408	Air intake temperature probe is defective.	Line break to air intake temperature probe.
E409	Compressor temperature probe is defective.	Compressor temperature probe is short-circuited.
E410	Compressor temperature probe is defective.	Line break to compressor temperature probe.
E411	Water intake or condensation temperature probe is defective.	Water intake or condensation temperature probe is short-circuited.
E412	Water intake or condensation temperature probe is defective.	Line break to water intake or condensation temperature probe.
E413	Evaporation pressure sensor is defective.	Evaporation pressure sensor is short-circuited.
E414	Evaporation pressure sensor is defective.	Line break to evaporation pressure sensor.
E415	Reserve pressure sensor is defective.	Reserve pressure sensor is short-circuited.
E416	Reserve pressure sensor is defective.	Line break to reserve pressure sensor.
E417	Condensation pressure sensor is defective.	Condensation pressure sensor is short-circuited.
E418	Condensation pressure sensor is defective.	Line break to condensation pressure sensor.
0 E419	One or more of the following problems has occurred: (1) Ambient temperature too high (2) Condenser contaminated (3) Cooling water temperature too high (4) Quantity of cooling water too low	Please check the setup conditions, including the ambient and cooling water temperatures, and clean the condenser.
1 E419	Error in Stage 1 of the cooling system.	Please check the setup conditions, including the ambient and cooling water temperatures, and clean the condenser.
E420	Error in Stage 1 of the cooling system.	If this error continues to occur, please contact JULABO Service.
E421	Ambient temperature outside specifications.	Please check the ambient temperature and clean the condenser.
E422	Ambient temperature outside specifications.	Please check the ambient temperature and clean the condenser.
E425	Error in cooling system.	If this error continues to occur, please contact JULABO Service.
E426	Error in cooling system.	If this error continues to occur, please contact JULABO Service.

Alarm-Code		Cause	Diagnosis / Remedy
0	E427	Error in Stage 1 of the cooling system.	One or more of the following problems has occurred: (1) Ambient temperature too high (2) Condenser contaminated (3) Cooling water temperature too high (4) Quantity of cooling water too low
0	E428	Error in stage 1 of the cooling system.	One or more of the following problems has occurred: (1) Ambient temperature too high (2) Condenser contaminated (3) Cooling water temperature too high (4) Quantity of cooling water too low
	E429	Smoke detection alarm	Identify cause and start firefighting measures.
	E430	Error in stage 1 of the cooling system.	One or more of the following problems has occurred: (1) Ambient temperature too high (2) Condenser contaminated (3) Cooling water temperature too high (4) Quantity of cooling water too low
	E431	No current draw detected from the compressor / compressor defective	If this error continues to occur, please contact JULABO Service.
	E432	Error in cooling system.	If the problem persists, please contact JULABO service.
	E433	Error in cooling system.	If the problem persists, please contact JULABO service.
	E434	Cooling water temperature out of specifications.	Check cooling water.
	E435	Cooling water temperature out of specifications.	Check cooling water.
	E502	Error in communications with the WirelessTEMP USB stick for remote control.	The WirelessTEMP USB stick has been deactivated. Please reconnect the WirelessTEMP USB stick or switch the remote control.
	E503	External setpoint assigned through Eprog, but no analog module found	Please deactivate external setpoint assignment through Eprog, or connect an analog module.
	E504	External setpoint assigned through Eprog, but no analog module found	Please deactivate external setpoint assignment through Eprog, or connect an analog module.
	E505	Invalid setpoint with setpoint assignment through Eprog.	The analog module is sending an invalid setpoint. Please check the Eprog settings.

Error messages

Alarm-Code	Cause	Diagnosis / Remedy
E506	Invalid flow value during flow regulation.	The calculated flow value is invalid for the flow regulator, or the function of the external sensor connection "JULABO Sensor Pressure/Flow" not set to the Flow setting. Please deactivate flow regulation, or switch the function of the external sensor connection to Flow.
E507	Invalid setpoint calculation in internal program sensor.	Please restart the profile.
E508	Invalid setpoint was received on the internal bus.	Please set a valid setpoint.
E509	Invalid setpoint should be send on the internal bus.	Please set a valid setpoint.
E510	Current measurement at the "JULABO Sensor Pres./Flow" sensor input incorrect.	Check the sensor and the menu settings for the sensor input "JULABO Sensor Pressure/Flow".
E513	Flow rate control via external bypass activated, but external bypass is not recognized.	Connect an external bypass to the system or change the type of pump control.

15.2. Warning messages

Alarm-Code	Cause	Diagnosis / Remedy
E03	Overtemperature limit exceeded during operation.	The temperature measured is above the overheating limit. Please raise the overheating limit, or lower the temperature setpoint.
E04	Subtemperature limit violated during operation.	The temperature measured is below the configured subtemperature limit. Please lower the subtemperature limit, or increase the temperature setpoint.
E40	The early warning system for low liquid level is indicating a critical liquid level.	Please refill temperature control liquid.
E41	The early warning system for high liquid level is indicating a critical liquid level.	Please drain temperature control liquid.
E1103	Error in level detection.	If this error continues to occur, please contact JULABO Service.
E1104	Error in level detection.	If this error continues to occur, please contact JULABO Service.
E1107	The temperature of the heat exchanger or the internal reservoir is near the configured safety temperature.	Check the setting of the high temperature cut-off.
E1108	The temperature of the heat exchanger or the internal reservoir is near the configured safety temperature.	Check the setting of the high temperature cut-off.
E1109	Probe differential limit activated.	Check heat transfer medium for suitability for use in the temperature range in use! The viscosity of the heat transfer medium may not exceed the maximum permitted value at any working temperature. Please contact JULABO Service if you have any questions regarding JULABO heat transfer media.
E1203	Error in pump pressure measurement.	If this error continues to occur, please contact JULABO Service.
E1204	Error in pump pressure measurement.	If this error continues to occur, please contact JULABO Service.
E1205	Error in cooling water flow rate measurement.	If this error continues to occur, please contact JULABO Service.
E1206	Error in cooling water flow rate measurement.	If this error continues to occur, please contact JULABO Service.
E1207	Error in total current measurement.	If this error continues to occur, please contact JULABO Service.
E1208	The current measurement for total current is incorrect.	If this error continues to occur, please contact JULABO Service.
E1209	Error in current measurement for compressor stage 1.	If this error continues to occur, please contact JULABO Service.

Error messages

Alarm-Code	Cause	Diagnosis / Remedy	
E1210	Error in current measurement for compressor stage 1.	If this error continues to occur, please contact JULABO Service.	
E1211	Error in current measurement for compressor stage 2.	If this error continues to occur, please contact JULABO Service.	
E1212	Error in current measurement for compressor stage 2.	If this error continues to occur, please contact JULABO Service.	
E1212	Error in current measurement in heater circuit.	If this error continues to occur, please contact JULABO Service.	
E1213	Error in current measurement of the pump.	If this error continues to occur, please contact JULABO Service.	
E1214	Error in current measurement of the pump.	If this error continues to occur, please contact JULABO Service.	
E1215	Error in main power voltage measurement.	If this error continues to occur, please contact JULABO Service.	
E1216	Error in main power voltage measurement.	If this error continues to occur, please contact JULABO Service.	
E1216	Error in voltage measurement in heater circuit.	If this error continues to occur, please contact JULABO Service.	
E1217	Error in main power frequency measurement.	If this error continues to occur, please contact JULABO Service.	
E1218	Error in main power frequency measurement.	If this error continues to occur, please contact JULABO Service.	
E1301	The temperature at the power module is higher than the configured limit.	Turn the unit off and ensure sufficient cooling.	
E1302	The heating is locked, since the pump pressure is too low.	Check the settings for the pump.	
E1303	The cooling for the electronics is too low.	If this error continues to occur, please contact JULABO Service.	
0	E1421	Ambient temperature out of specifications.	Please check the ambient temperature and clean the condenser.
	E1422	Ambient temperature out of specifications.	Please check the ambient temperature and clean the condenser.
	E1423	Compressor temperature too low.	Please check the ambient temperature.
	E1424	Compressor temperature too high.	Please check the ambient temperature and clean the condenser.
0	E1427	Error in stage 1 of the cooling system.	One or more of the following problems has occurred: (1) Ambient temperature too high (2) Condenser contaminated (3) Cooling water temperature too high (4) Quantity of cooling water too low

Alarm-Code		Cause	Diagnosis / Remedy
	E1434	Cooling water temperature too high	Check cooling water.
	E1435	Cooling water temperature too low	Check cooling water.
	E1501	A timeout occurred on the serial interface.	If the watchdog is activated, the setpoint must be sent to the device periodically, at least every 30 seconds.
	1502	The pressure in the temperature control circuit is higher than the configured warning limit	(1) Correct the pressure setpoint downwards or (2) Adjust the warning limit upwards (if reasonable from a safety standpoint).
	1503	The pressure in the temperature control circuit is lower than the configured warning limit	(1) Correct the pressure setpoint upwards or (2) Adjust the warning limit downwards (if reasonable from a safety standpoint).
	1504	The flow in the temperature control circuit is higher than the configured warning limit	(1) Correct the flow setpoint downwards or (2) Adjust the warning limit upwards (if reasonable from a safety standpoint).
	1505	The flow in the temperature control circuit is lower than the configured warning limit	(1) Correct the flow setpoint upwards or (2) Adjust the warning limit downwards (if reasonable from a safety standpoint).

16. Appendix: Peer-to-peer remote display operation of PRESTO[®]

with CerHost via Ethernet

16.1. Connect the PRESTO™ to the LAN port of your PC or tablet


Please refer to the operating manual of the PRESTO™, chapter “Electrical connections on the front side of the device”

16.2. Adjust the Network settings on your PC


Note:

You need to have admin rights.


Click on the start button in the lower left corner and select “Control Panel”.

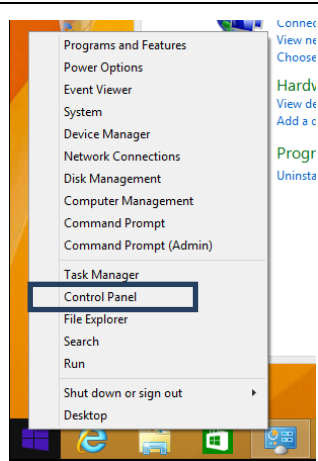


Select „View network status and tasks“ in “Network and Internet”.

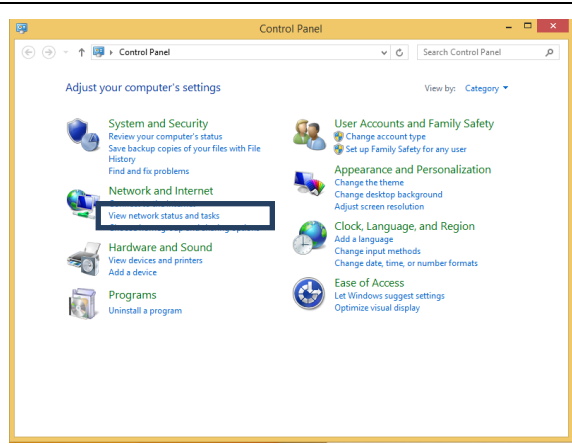


Select „Change adapter settings“.

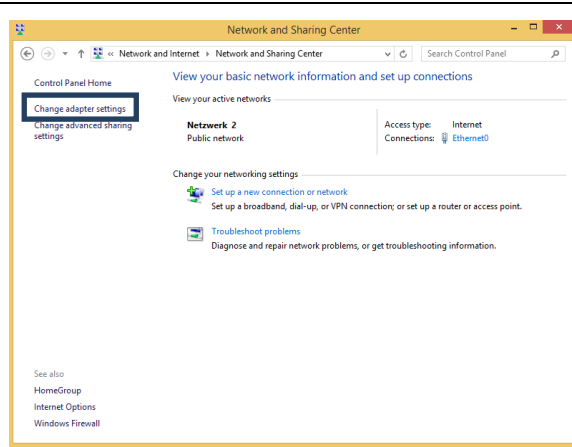

Right mouse click on the network adapter and select „Properties“. Normally you will find multiple network adapters. You can identify the correct adapter by checking the icon. This should look like the one below:

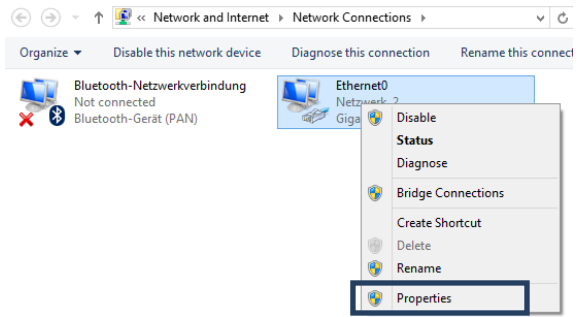


In the properties dialog, scroll down the list under „This connection uses the following items:“, select „Internet Protocol Version 4 (TCP/IPv4)“ and click the „Properties“ button.

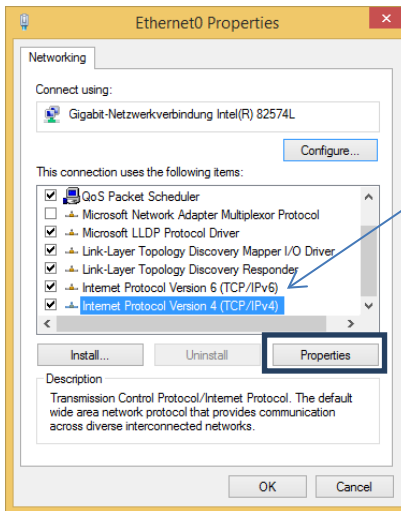

Activate “Use the following IP address:” and enter a valid IP address and a valid subnet mask. Then click “OK” to activate the changes.

Note:

The subnet mask should be equal to the example on the right.

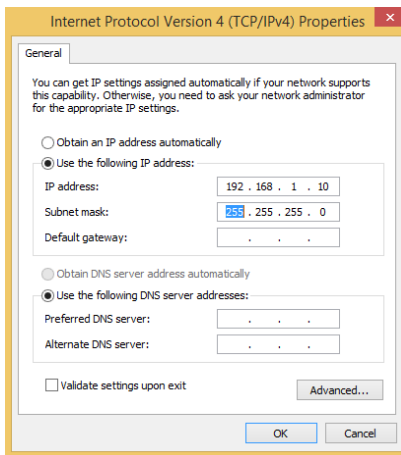

16.3. Adjust settings on the PRESTO™

Go to
 “Menu” → “Connect unit” → “Digital interfaces” →
 “Ethernet”

Deactivate “Obtain IP via DHCP” by selecting
 “False” and enter an IP address and a subnet mask.

Notes:

- Use the same subnet mask as previously entered on your PC.
- The first 3 IP address parts must be equal to the first 3 parts entered at the PC.
- The last IP address number must be different to the one entered at the PC.
Note: 0 and 255 as values for the last IP address number are not allowed.




Activate the Remote display access by selecting
 “Active” at the Remote display button



16.4. Connect to the PRESTO™ with CerHost

Start CerHost.exe and click on File→Connect.

Enter the IP address of the PRESTO™ as shown
 on the right and click “OK”.

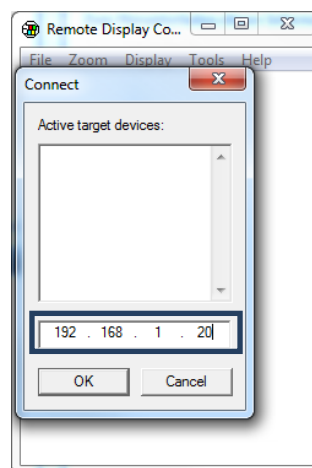

Now the CerHost software mirrors the PRESTO™ display on your PC. You can operate the PRESTO™ either on the PC as well as on the PRESTO™ user interface.

Note:

- CerHost does not store any adjustments. Once the program is closed and started again you have to connect to the PRESTO™ again by repeating the actions described in chapter 4.

